

The Samsung logo is displayed in white, bold, uppercase letters inside a dark gray oval shape.

HW-J6001

User manual

Curved Soundbar

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

FEATURES

Samsung Remote App

Control your Soundbar in the palm of your hand with the Samsung Audio Remote App*. This convenient app is a control hub for basic controls like power, volume, and media controls, as well as custom settings like equaliser setting.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience.

TV SoundConnect

Connect your TV and Soundbar easily through Bluetooth with TV SoundConnect. The absence of trailing wires between the Soundbar and TV allows you to showcase the slim and sleek design of both systems, while maintaining a clean look in your living environment. Easily control the Soundbar and TV from a single TV remote.

HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture. The unit is also equipped with the ARC function which lets you listen to sound from your TV through the Soundbar via an HDMI cable. This function is only available if you connect the unit to an ARC compliant TV.

USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Soundbar's USB HOST function.

Bluetooth Function

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

LICENCES



Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see <http://patents.dts.com>. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN			This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.
				This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.


CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.


CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.


PRECAUTIONS

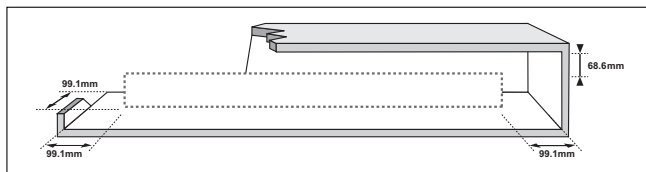


Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7–10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

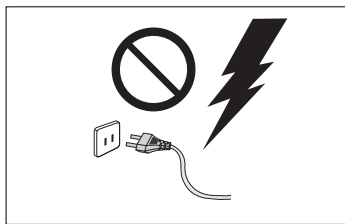


During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

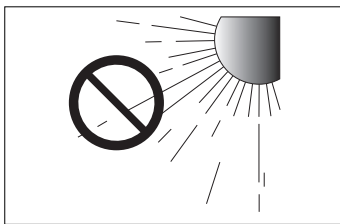

Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.

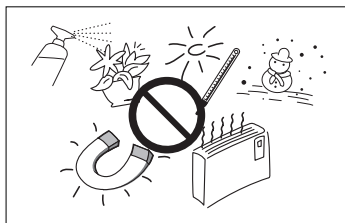

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

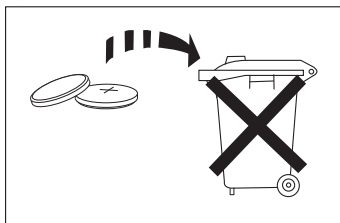

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. Do not dispose of batteries in a fire. Do not short circuit, disassemble, or overheat the batteries. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.



WARNING, DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD, The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CONTENTS

2 GETTING STARTED

- 2 Features
- 3 Safety Information
- 6 What's Included

7 DESCRIPTIONS

- 7 Top / Front Panel
- 8 Rear / Bottom Panel
- 9 Remote Control

11 INSTALLATION

- 11 Installing the Soundbar
 - 11 Installing the Wall Mount
 - 14 Attaching the Soundbar to your TV's Stand
 - 14 Installing Soundbar to Free-Standing

15 CONNECTIONS

- 15 Connecting the Subwoofer
- 17 Connecting to a TV
 - 17 Connections with TV Using HDMI (Digital) Cable
 - 17 Connections with TV Using Optical (Digital) Cable
 - 18 TV SoundConnect
- 20 Connections with External Device
 - 20 HDMI Cable
 - 20 Optical or AUX Cable
 - 21 USB

23 FUNCTIONS

- 23 Input Mode
- 24 Bluetooth
- 27 Software Update

28 TROUBLESHOOTING

- 28 Troubleshooting

29 APPENDIX

- 29 Specifications

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

WHAT'S INCLUDED


BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual


Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be cancelled.
	Note	Indicates tips or instructions on the page that help you operate a function.

Check for the supplied accessories shown below.

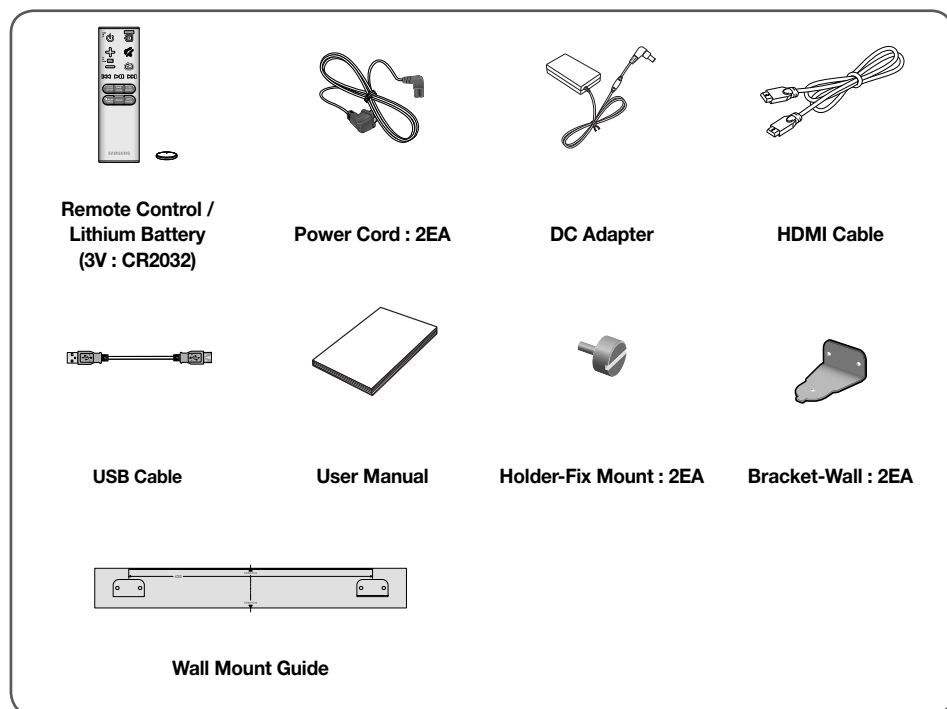


- The appearance of the accessories may differ slightly from the illustrations above.
- Use the dedicated USB cable to connect external USB devices to the unit.

TOP / FRONT PANEL

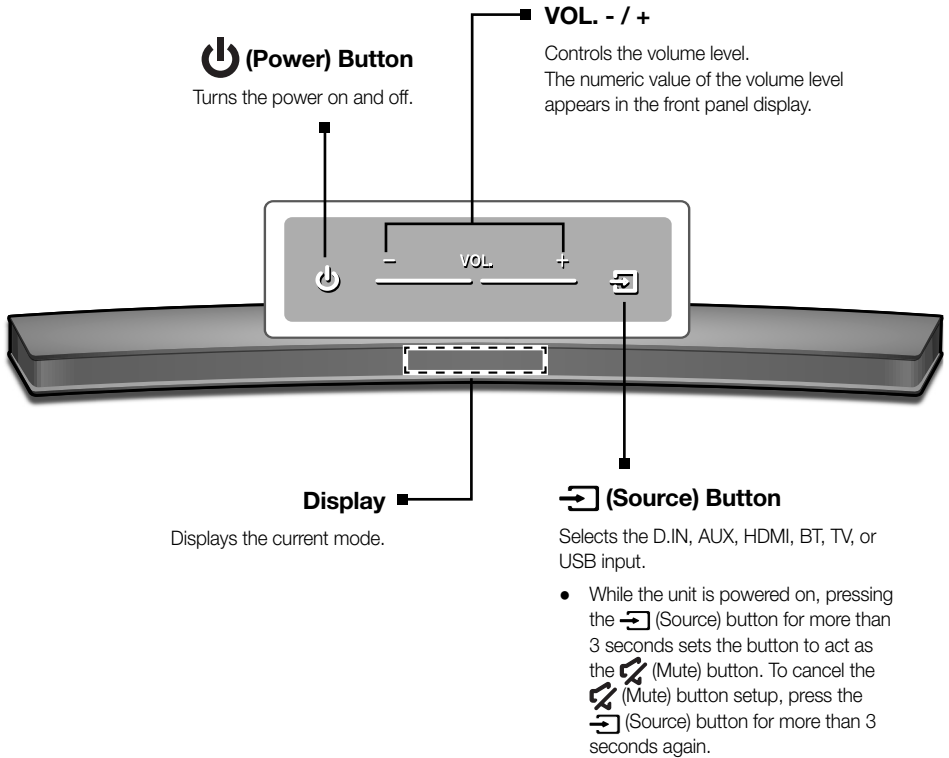


- When you plug in the AC cord, the power key will work in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy the sound only from the Soundbar, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

REAR / BOTTOM PANEL

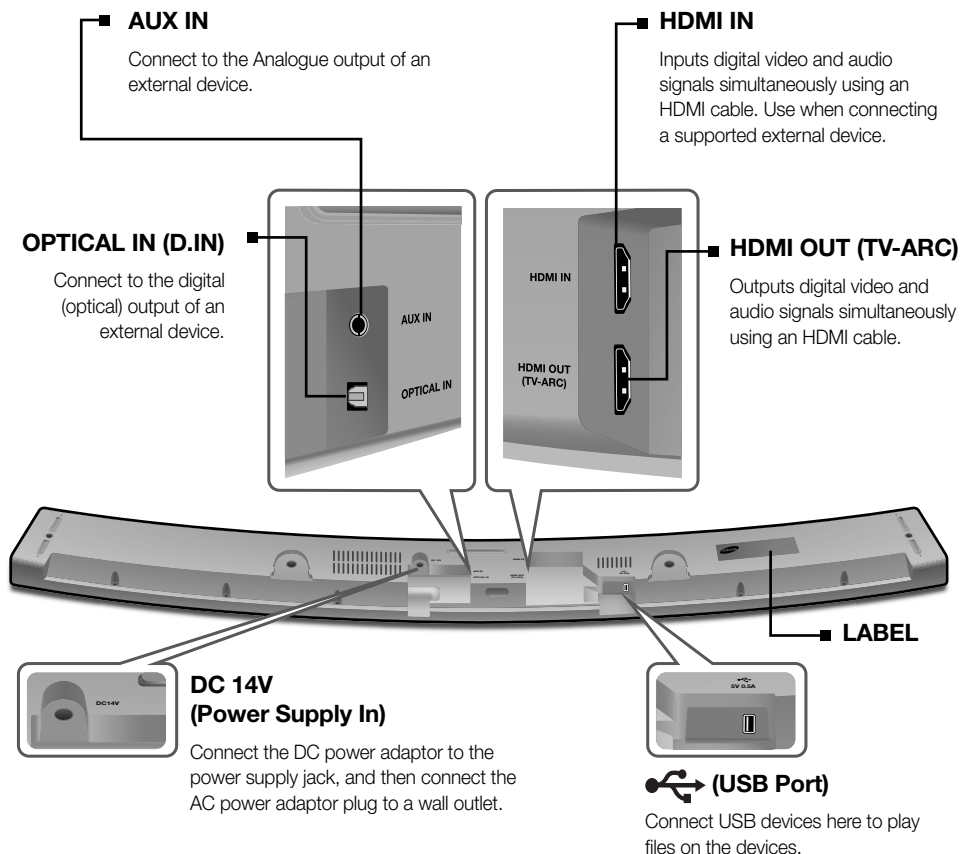

- When disconnecting the power cable of the AC power adaptor from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

REMOTE CONTROL

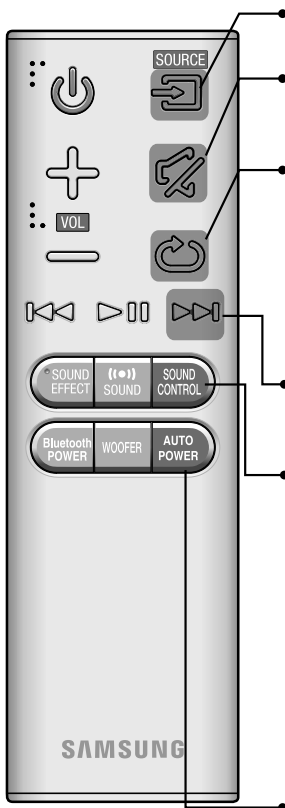

SOURCE

Press to select a source connected to the Soundbar.

Mute

You can turn the volume down to 0 with the push of a button. Press again to restore the sound to the previous volume level.

Repeat

Press to set the Repeat function during music playback from a USB device.

OFF - REPEAT : Cancels Repeat Playback.

TRACK - REPEAT : Repeatedly play a track.

ALL - REPEAT : Repeatedly play all tracks.

RANDOM - REPEAT : Plays tracks in random order.

(A track that has already been played may be played again.)

Skip Forward

If there is more than one file on the device you are playing, and you press the ►► button, the next file is selected.

SOUND CONTROL

Press to select **TREBLE**, **BASS**, or **AUDIO SYNC**. Then, use the ◀◀, ▶▶ buttons to adjust the Treble, Bass volume from -6 to +6.

Press and hold the **SOUND CONTROL** button for about 5 seconds to adjust the sound for each frequency band. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz, 10KHz and SW are selectable and each can be adjusted to a setting between -6 and +6.

If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **SOUND CONTROL** button to sync the audio with the video. Use the ◀◀, ▶▶ buttons to set the audio delay between 0 ms and 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not be available.

AUTO POWER

Press the **AUTO POWER** button to turn the Anynet+ function on or off.

(Default : Auto Power Link OFF, **ON - ANYNET+** / **OFF - POWER LINK** or **OFF - ANYNET+** / **ON - POWER LINK**). The Anynet+ function lets you control the Soundbar with the remote from an Anynet+ compatible Samsung TV. The Soundbar must be connected to the TV via an HDMI cable.


* Auto Power Link

Synchronizes the Soundbar to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV.


(See page 18)



- Soundbar is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

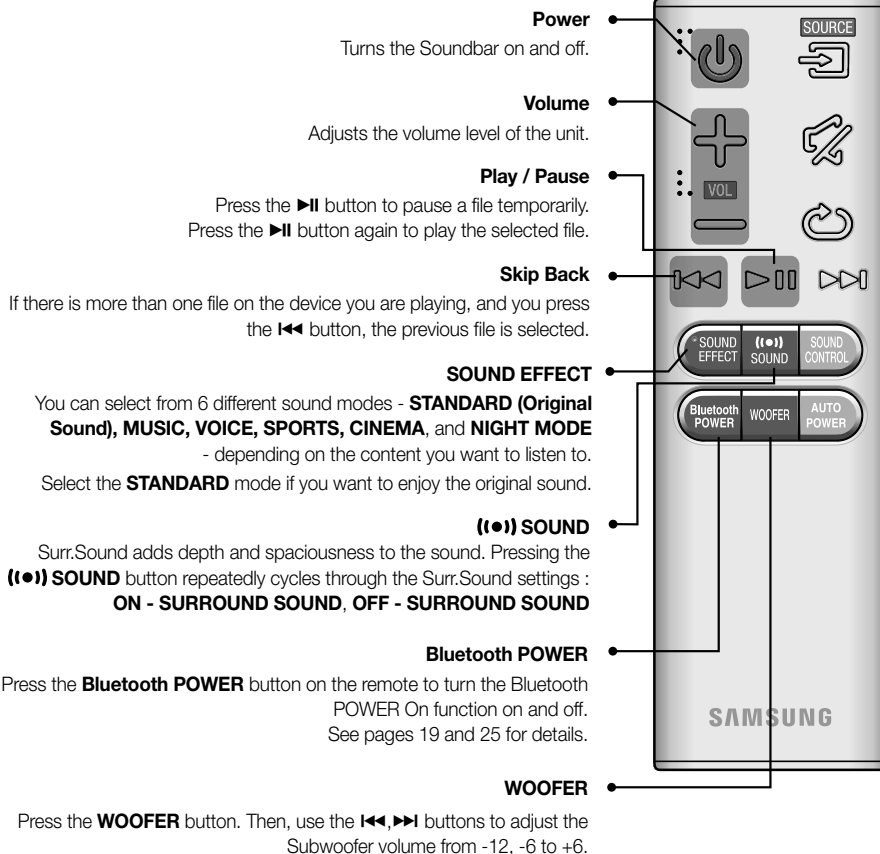

INSTALLING THE BATTERY IN THE REMOTE CONTROL

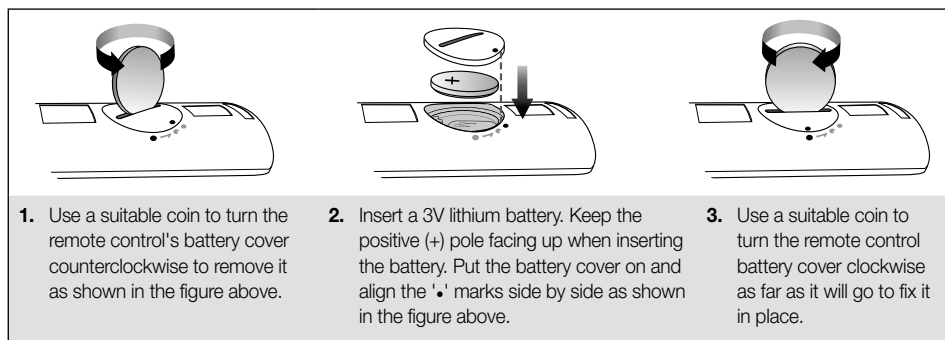


INSTALLING THE SOUNDBAR


INSTALLING THE WALL MOUNT

► Installation Precautions


- Install on a vertical wall only.
- For the installation, avoid a location with high temperature or humidity, or a wall that cannot sustain the weight of the set.
- Check the strength of the wall. If the wall is not strong enough to support the unit, reinforce the wall or install the unit on a different wall that can support the unit's weight.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you will mount the Soundbar on.
 - Diameter : M5
 - Length: L 35 mm or longer recommended.
- Connect cables from the unit to external devices before you install it on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

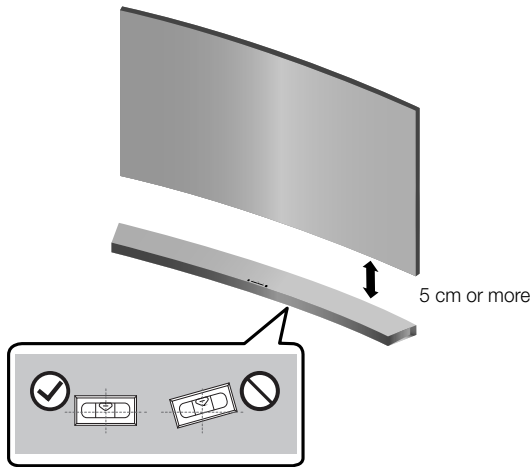


1. Place the installation guide against the wall surface.
 - The installation guide must be level.
 - If the TV is mounted on the wall, install the Soundbar at least 5 cm below the TV.

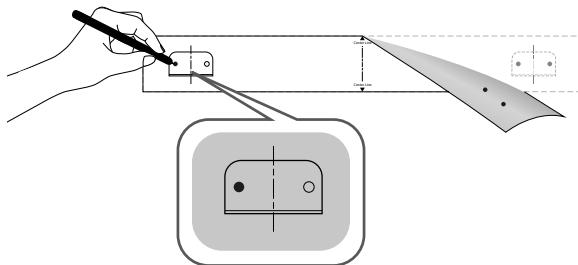


2. Mark the location where the screws will go through on the wall, and then remove the installation guide. Next, drill holes for the screws using an appropriately sized drill bit.

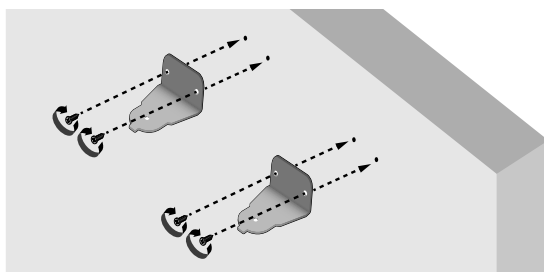

3. Fasten the **Bracket-Wall** (2EA) and screws to the marked locations.

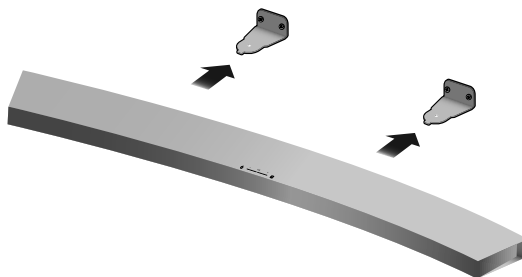

4. Lift up the product after inserting the **Bracket-Wall** as shown.

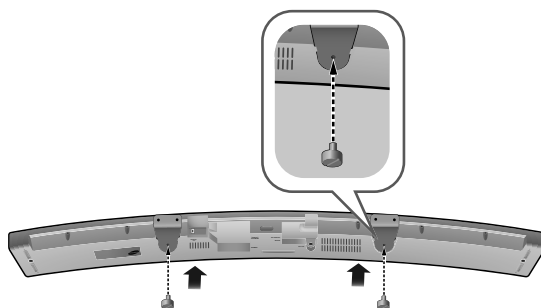

5. Insert and fasten **Holder-Fix Mount** into each hole on the product's bottom side. The product is fixed to the **Bracket-Wall**.




- Do not hang onto the installed unit and avoid striking or dropping the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may cause an injury or damage the product.
- When the unit is installed on a wall, please make sure that children do not pull any of the connecting cables, as it may cause it to fall.
- For the optimal performance of a wall mount installation, install the speaker system at least 5 cm below the TV, if the TV is mounted on the wall.
- For your safety, if you do not mount the unit on the wall, install it on a secure, flat surface where it is unlikely to fall.

ATTACHING THE SOUNDBAR TO YOUR TV'S STAND

You can attach the Soundbar to your TV's stand if you have a Samsung TV that has a stand that is compatible with this Soundbar.



- This Soundbar is compatible with model JU6700, JU6500 and JU7500, 48 inch, 55 inch and 65 inch, JU6610 - 48 inch and 55 inch, 2015 Samsung curved TVs. Please visit the home page of Samsung Electronics (www.Samsung.com) to see a detailed list of the compatible models.
- This Soundbar cannot be installed to a non-compatible TV, in either form of TV mount or TV stand.

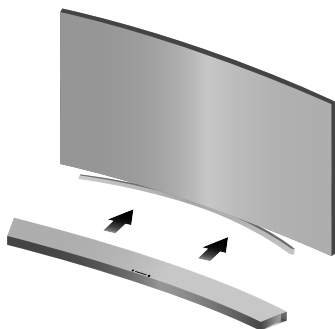

1. Align the Soundbar's centre with the centre of the base of the TV, and then carefully push it onto the stand as far as it will go, as shown in the illustration. Be careful not to unbalance the TV.

INSTALLING SOUNDBAR TO FREE-STANDING



1. Centre the Soundbar on the flat area in front of the TV.



- Install it on a level and firm surface.



- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

CONNECTING THE SUBWOOFER


CONNECTING TO THE SUBWOOFER AUTOMATICALLY

The main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on.

- If it is completely connected, the blue LED in the subwoofer stops blinking.

CONNECTING TO THE SUBWOOFER MANUALLY

The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on. If the Link indicator does not light when the main unit and subwoofer are turned on, please set the ID by following the procedure below.

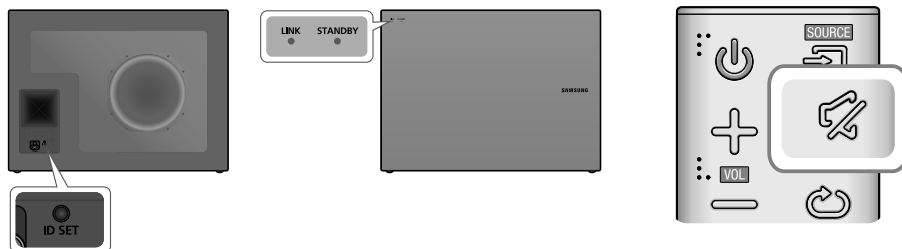

1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
 - The STANDBY indicator is turned off and the LINK indicator (Blue LED) blinks quickly.
3. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
4. The **ID SET** message appears on the Soundbar's display.
5. To finalise the link, turn the main unit's power on while the subwoofer's Blue LED blinks.
 - The main unit and the subwoofer should now be linked (connected).
 - The Link indicator (Blue LED) on the subwoofer should be on.
 - If the Link indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
 - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 10)




- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will be in standby mode and the STANDBY LED on the upper side will come on after the Link indicator (Blue LED) blinks for 30 seconds.
- If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
- The transmission distance of the wireless signal between the main unit and subwoofer is about 10 meters, but may vary depending on your operating environment. If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make a wireless connection, follow steps 1-5 on the previous page to re-set the connection between the main unit and wireless subwoofer.



- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.

CONNECTING TO A TV

CONNECTIONS WITH TV USING HDMI (DIGITAL) CABLE

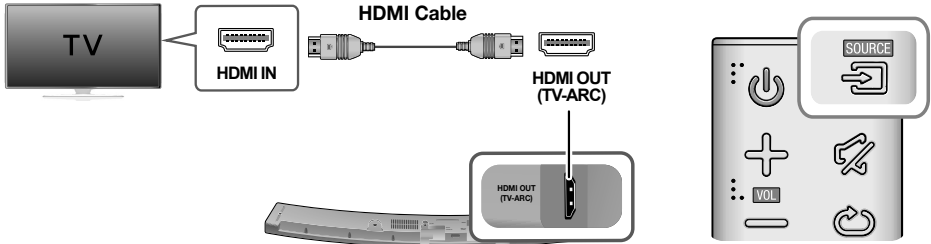


1. Connect an HDMI cable from the **HDMI OUT (TV-ARC)** jack on the back of the product to the HDMI IN jack on your TV.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.



- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
- If the TV provides an ARC port, connect the HDMI cable to the HDMI IN (ARC) port.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

CONNECTIONS WITH TV USING OPTICAL (DIGITAL) CABLE

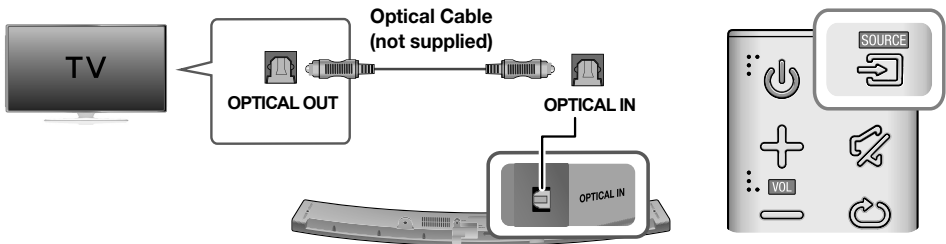

1. Connect **OPTICAL IN** (Audio) on the Soundbar to the OPTICAL OUT jack of the TV.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

► Auto Power Link

If you have connected the main unit to a TV with a digital optical cable, set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

AUTO POWER LINK	Display
ON	OFF - ANYNET+ / ON - POWER LINK
OFF	ON - ANYNET+ / OFF - POWER LINK


1. Connect the Soundbar and a TV with an Optical cable (not supplied).
2. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **D.IN** mode.
3. Press the **AUTO POWER** button on the remote control to toggle the Auto Power Link function on and off.



- Depending on the connected device, Auto Power Link may not function.

TV SOUNDCONNECT

You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

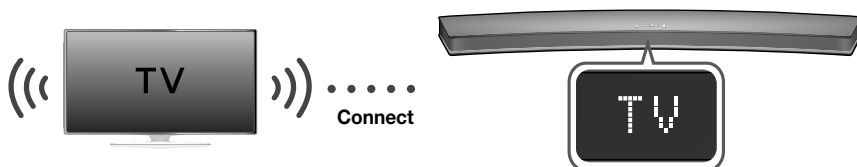

1. Turn on the TV and Soundbar.
 - Turn on the menu of the TV.
 - Move to Speaker Settings on "Sound" tab.
 - Set the "Add New Device" menu to "On".
2. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears.
4. Select **<Yes>** to finish connecting the TV and Soundbar using the TV's remote control.



- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, and then press the ►II button on the remote control for 5 seconds to connect to another TV.



- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.).
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 10 meters, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
 - Recommended pairing range: within 2 meters.
 - Recommended operational range: within 10 meters.
- The Play/Pause, Next, and Prev buttons on the Soundbar or Soundbar's remote do not control the TV.

► Using the Bluetooth POWER On function

The Bluetooth POWER On function is available after you have successfully connected the Soundbar to a Bluetooth compatible TV using TV SoundConnect. When the Bluetooth POWER On function is ON, turning the connected TV on or off will turn the Soundbar's power on and off as well.

1. Connect the TV to your Soundbar using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the Soundbar remote. **ON - BLUETOOTH POWER** appears on the Soundbar's display.
 - **ON - BLUETOOTH POWER** : The Soundbar turns on and off when you turn the TV on or off.
 - **OFF - BLUETOOTH POWER** : The Soundbar only turns off when you turn the TV off.




- This function is supported by some Samsung TVs released from 2013 on.

CONNECTIONS WITH EXTERNAL DEVICE

HDMI CABLE

HDMI is the standard digital interface for connecting to TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.


HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

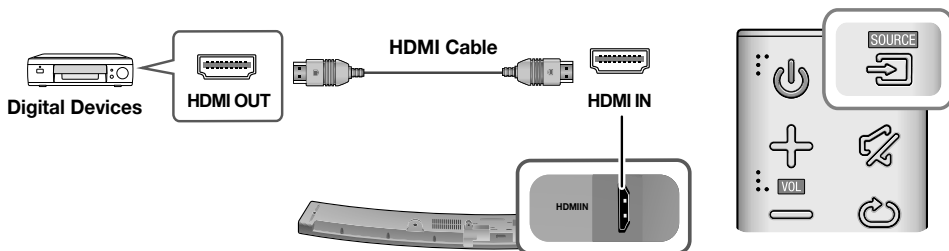

1. Connect an HDMI cable from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **HDMI** mode.

OPTICAL OR AUX CABLE

This unit comes equipped with one optical in digital jack and one audio analogue in jack, giving you two ways to connect it to an External Devices.

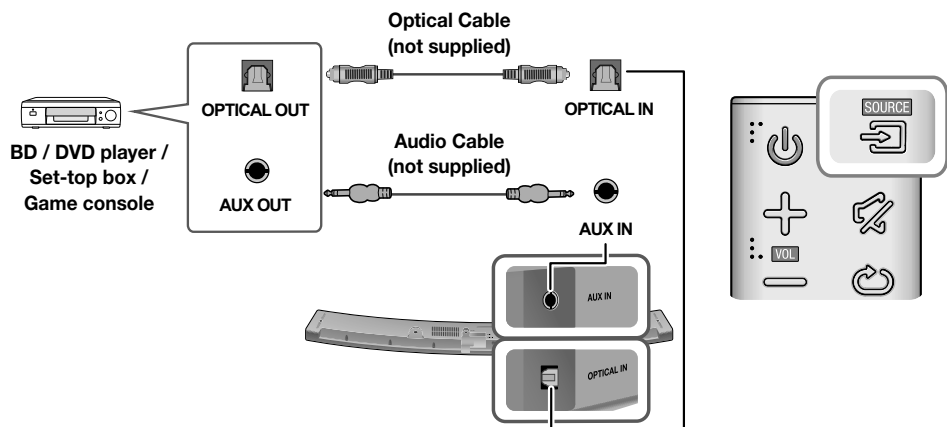

► AUX Cable


1. Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the Source Device.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **AUX** mode.

► Optical Cable

1. Connect **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the Source Device.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

USB

You can play music files located on USB storage devices through the Soundbar.

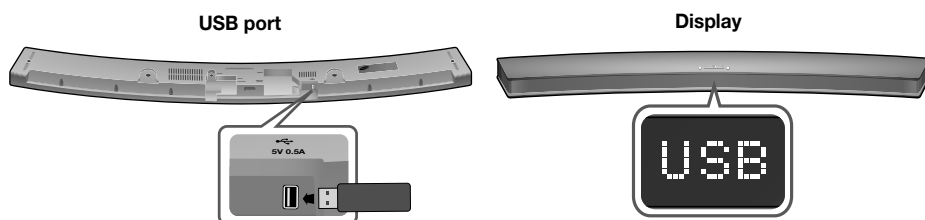

1. Connect the USB device to the USB port on the back of the product.
2. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
 - The Soundbar connection to the USB device is complete.
 - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 25 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file or folder on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
 - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.

CONNECTIONS

- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:


Extension	Codec	Sampling Rate	Bit rate
*.mp3	MPEG 1 Layer2	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 1 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2.5 Layer3	16KHz ~ 48KHz	80kbps~320kbps
*.wma	Wave_Format_MSAudio1	16KHz ~ 48KHz	56kbps~128kbps
	Wave_Format_MSAudio2	16KHz ~ 48KHz	56kbps~128kbps
*.aac	AAC	16KHz ~ 96KHz	48kbps~320kbps
	AAC-LC	16KHz ~ 96KHz	128kbps~192kbps 5.1ch 320kbps
	HE-AAC	24KHz ~ 96KHz	48kbps~64kbps 5.1ch 160kbps
*.wav	-	16KHz ~ 48KHz	up to 3000kbps
*.ogg	OGG 1.1.0	16KHz ~ 48KHz	50kbps~500kbps
*.flac	FLAC 1.1.0, FLAC 1.2.1	16KHz ~ 96KHz	up to 3000kbps



- If there are too many folders and files stored in the USB device, reading may take some time.

INPUT MODE

Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the mode you want.

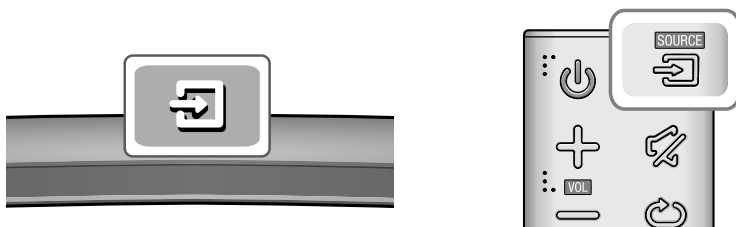

Input mode	Display
Optical Digital input ARC (HDMI OUT) input	D.IN
AUX input	AUX
HDMI input	HDMI
BLUETOOTH mode	BT
TV SoundConnect	TV
USB mode	USB

The unit turns off automatically in the following situations.

- D.IN / HDMI / BT / TV / USB / ARC Mode
 - If there is no audio signal for 25 minutes.
- AUX Mode

To turn the Auto Power Down function ON or OFF, press and hold the **▶II** button for 5 seconds.

ON - AUTO POWER DOWN / OFF - AUTO POWER DOWN appears on the display.


- If the AUX cable is disconnected for 25 minutes.
- If there is no KEY input for 8 hours when the AUX cable is connected.

BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

TO CONNECT THE SOUNDBAR TO A BLUETOOTH DEVICE

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

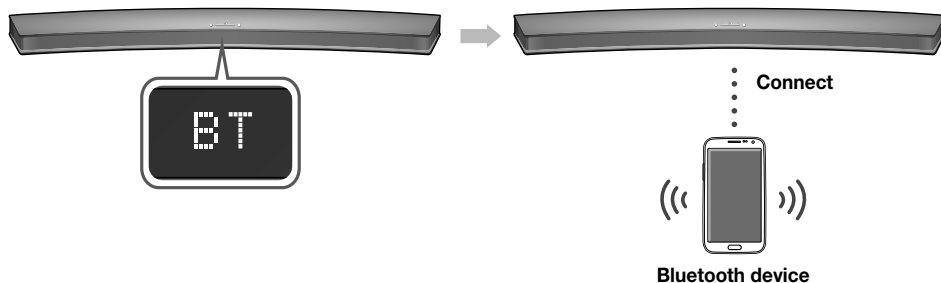

1. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
 - You will see **BT READY** on the front display of the Soundbar.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select "**[Samsung] Soundbar J-Series**" from the list.
 - When the Soundbar is connected to the Bluetooth device, it will display **[Bluetooth device name] → BT** on the front display.
 - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
 - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "**[Samsung] Soundbar J-Series**" found by the Bluetooth device and have it search for the Soundbar again.
4. Play music on the connected device.
 - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
 - In **BT** mode, the Play / Pause / Next / Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.



- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
 - If there is a strong electrical field around the Soundbar.
 - If several Bluetooth devices are simultaneously paired with the Soundbar.
 - If the Bluetooth device is turned off, not in place, or malfunctions.
 - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- Once you have paired the Soundbar to a Bluetooth device, selecting "[Samsung] Soundbar J-Series" from the device's scanned devices list will automatically change the Soundbar to **BT** mode.
- Available only if the Soundbar is listed among the Bluetooth device's paired devices. (The Bluetooth device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Bluetooth device's searched devices list only when the Soundbar is displaying **BT READY**.
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Bluetooth device.

BLUETOOTH POWER ON (BLUETOOTH POWER)

When the Bluetooth POWER On function is on and the Soundbar is turned off, if a previously paired Bluetooth device tries to pair with the Soundbar, the Soundbar turns on automatically.

1. Press the **Bluetooth POWER** on the remote while the Soundbar is turned on.
2. **ON - BLUETOOTH POWER** appears on the Soundbar's display.

TO DISCONNECT THE BLUETOOTH DEVICE FROM THE SOUNDBAR

You can disconnect the Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

TO DISCONNECT THE SOUNDBAR FROM THE BLUETOOTH DEVICE

Press the **SOURCE** button on the remote control or the  (Source) button on the product's top panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)



- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 10 meters.
- The Soundbar automatically turns off after 25 minutes in the Ready state.

► More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
 - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
 - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
 - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

USING SAMSUNG AUDIO REMOTE APP

► Install Samsung Audio Remote App


To control the product with your Smart Device and the Samsung Audio Remote app, download the Samsung Audio Remote App through Google Play store.

Market search : Samsung Audio Remote




► Accessing the Samsung Audio Remote App

After you install the Samsung Audio Remote app, follow the instructions in the app.

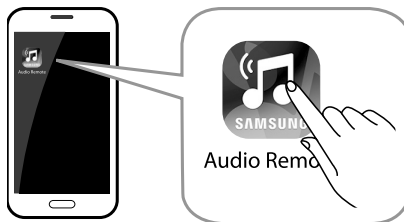

- The APP function only supports mobile phone Android devices running Android OS 3.0 or later.

SOFTWARE UPDATE

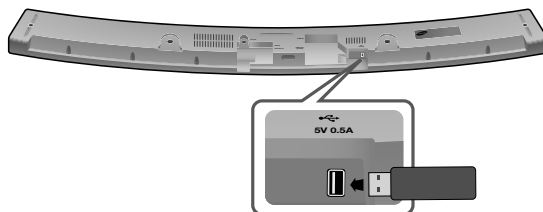

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading updates files.



- Insert a USB device containing the firmware update into the USB port on the main unit.
- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.
- After the update, all settings are reset to their factory default settings. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets the subwoofer connection too.

If connection to the subwoofer is not re-established automatically after the update, refer to page 15.

If the firmware fails to update, we recommend formatting the USB device in FAT16 and trying again.

- Once the software update is completed, turn off the product and then press and hold the (►||) button on the remote control for more than 5 seconds. "INIT" appears on the display and the unit is powered off. The upgrade is complete.
- Do not format the USB device in the NTFS format. The Soundbar does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.

- | | |
|--|---|
| • Is the power cord plugged into the outlet? | → Connect the power plug to the outlet. |
|--|---|

A function does not work when the button is pressed.

- | | |
|---|---|
| • Is there static electricity in the air? | → Disconnect the power plug and connect it again. |
|---|---|

Sound is not produced.

- | | |
|---------------------------------|---|
| • Is the Mute function on? | → Press the  (Mute) button to cancel the function. |
| • Is the volume set to minimum? | → Adjust the Volume. |

The remote control does not work.

- | | |
|---|-------------------------------|
| • Are the batteries drained? | → Replace with new batteries. |
| • Is the distance between the remote control and main unit too far? | → Move closer to the unit. |

The TV SoundConnect (TV pairing) failed.

- | | |
|---|--|
| • Does your TV support TV SoundConnect? | → TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect. |
| • Is your TV firmware the latest version? | → Update your TV with the latest firmware. |
| • Does an error occur when connecting? | → Contact the Samsung call centre. |
| • Reset the TV mode and connect again. | → Press and hold the  button for 5 seconds to reset the TV SoundConnect connection. |

The red LED on the subwoofer blinks and the subwoofer is not producing sound.

- | | |
|--|---|
| • Your subwoofer may not be connected to the main body of the product. | → Try to connect your subwoofer again.
(See Page 15) |
|--|---|

The subwoofer drones and vibrates noticeably.

- | | |
|--|---|
| • Try to adjust the vibration of your subwoofer. | → Press the WOOFER button on your remote control to adjust its value (between -12, -6 to +6.). |
|--|---|

SPECIFICATIONS

Model name		HW-J6001	
GENERAL	USB		5V / 0.5A
	Weight	Main Unit	2.7 kg
		Subwoofer (PS-WJ6001)	6.8 kg
	Dimensions (W x H x D)	Main Unit	1078 x 47.5 x 129 mm
		Subwoofer (PS-WJ6001)	452 x 335 x 154 mm
	Operating Temperature Range		+5°C to +35°C
	Operating Humidity Range		10 % to 75 %
AMPLIFIER	Rated Output Power	Main Unit	22W/CH x 6, 4ohm, THD=10%, 1KHz
		Subwoofer (PS-WJ6001)	168W, 3ohm, THD=10%, 100Hz
	S/N Ratio (Analogue Input)		65 dB
	Separation (1kHz)		65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

※ Open Source Licence Notice

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

SAMSUNG

HW-J6001

מדריך למשתמש

Curved Soundbar

דמיינו את האפשרויות

תודה שרכשתם מוצר זה מתוצרת Samsung.
לקבלת שירות מלא יותר, רשמו את המוצר שברשותכם באתר
www.samsung.com/register



AH68-02833V-00



AH68-02833V-00

מאפיינים

פונקציית Bluetooth

ניתן לחבר למכשיר ה-Soundbar התקן Bluetooth כדי ליהנות ממוזיקה המושמעת בסטריאו באיכות גבוהה, באופן אלחוטי בלבד!

רישיון



מיוצר תחת רישיון Dolby Laboratories. Dolby וסמל ה-D הכפולה הם סמלים מסחריים של Dolby Laboratories.



לפטנטים של DTS, ראה <http://patents.dts.com>. מיוצר תחת רישיון מ-DTS Licensing Limited. הסמל, ו-DTS והסמל יחדיו, הם סימנים מסחריים רשומים, ו-DTS 2.0 Channel הוא סימן מסחרי של DTS, Inc. © DTS, Inc. כל הזכויות שמורות.

ומכא

המונחים HDMI High-Definition Multimedia Interface, וכן הלוגו של HDMI, הם סימנים מסחריים או סימנים מסחריים רשומים של HDMI Licensing LLC בארצות הברית ובמדינות אחרות.

היישום Samsung Remote

שלט על ה-Soundbar מכף ידך באמצעות היישום Samsung Audio Remote*. יישום נוח זה הינו רכזה בקרה לבקורות בסיסיות כגון הפעלה, עוצמת קול ובקורות מדיה, וכן הגדרות מותאמות אישית כגון הגדרות אקולייזר.

הרחבת צליל Surround

התכונה 'הרחבת צליל Surround' מוסיפה תחושת עומק ומרחב לחווית ההאזנה.

TV SoundConnect

חבר את הטלוויזיה וה-Soundbar בקלות דרך Bluetooth עם TV SoundConnect. היעדר כבלים המשתרכים בין ה-Soundbar לטלוויזיה מאפשר להציג את העיצוב הדק והמלוטש של שתי המערכות תוך שמירה על מראה נקי בסביבת המגורים. שלוט בקלות על ה-Soundbar והטלוויזיה משלט רחוק אחד.

HDMI

HDMI משדר אותות וידאו ושמע בו-זמנית ומספק תמונה ברורה יותר.

המכשיר מצויד גם בפונקציית ARC שמאפשרת להאזין לצליל מהטלוויזיה ב-Soundbar באמצעות כבל HDMI. פונקציה זו זמינה רק כאשר מחברים את המכשיר לטלוויזיה תואמת ARC.

תמיכה בחיבור USB

באפשרותכם לחבר ולהשמיע קובצי מוזיקה מהתקני אחסון USB חיצוניים כגון נגיני MP3, זיכרון הבק USB וכו', באמצעות פונקציית ה-USB HOST של Soundbar.

מידע אודות בטיחות

הוראות בטיחות

לצמצום הסיכון להתחשמלות, אין להוריד את המכסה (או הדופן האחורית).
המכשיר אינו כולל חלקים שניתנים לתיקון על-ידי המשתמש. לתיקון ושירות, פנו לטכנאי שירות מוסמך.

סמל זה מציין "מתח מסוכן" שקיים בתוך המכשיר ועלול לגרום להתחשמלות או לפציעה.		זהירות סכנת התחשמלות לא לפתוח 
סמל זה מציין הוראות חשובות הנלוות למכשיר.		

אזהרה : לצמצום הסיכון לשריפה או להתחשמלות, אין לחשוף מכשיר זה לגשם או ללחות.


זהירות : למניעת התחשמלות, יש להתאים את הפין הרחב של התקע לחרץ הרחב בשקע ולהכניסו עד הסוף.

- יש לוודא כי מתקן זה יחובר כל העת לשקע זרם חליפין עם הגנת חיבור הארקה.
- כדי לנתק את המכשיר מהחשמל, יש לשלוף את התקע משקע החשמל, לכן על שקע החשמל להיות זמין לשימוש בכל עת.


זהירות

- אין לחשוף את המכשיר לטפטוף או להתזה של נוזלים. אין להניח על המכשיר כלים מלאים בנוזלים, כגון אגרטלים.
- לכיבוי מוחלט של המכשיר, עליכם להוציא את התקע שלו משקע החשמל. לכן, על התקע להיות זמין ונגיש בכל זמן.


אמצעי זהירות

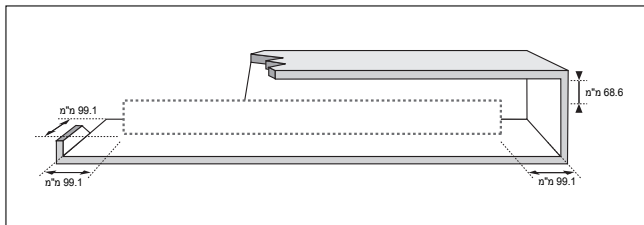


ודאו כי מקור זרם החשמל בבייתכם עונה על דרישות המתח שמצוינות במדבקת הזהיור שבגב המכשיר. התקינו את המכשיר בצורה אופקית על בסיס מתאים (רהיט), כשיש מספיק רווח סביבו לאורך 10~7 ס"מ. יש לוודא כי פתחי האוורור אינם חסומים. אין להניח את המכשיר על גבי מגברים או מוצרים אחרים שעשויים להתחמם. מכשיר זה מיועד לשימוש ממושך. כדי לכבות את המכשיר לחלוטין, נתקו את כבל החשמל מתקע החשמל. נתקו את המכשיר מהחשמל אם אתם מתכוונים לא להשתמש בו למשך תקופה ארוכה.

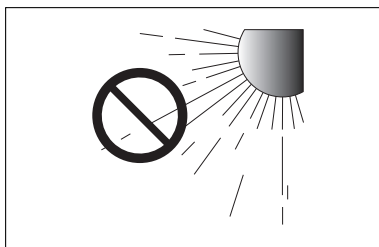


אין לחשוף את המכשיר באופן ישיר לאור יום או למקורות חום אחרים. חשיפה כזו עלולה לגרום להתחממות יתר ולתקלות במכשיר.

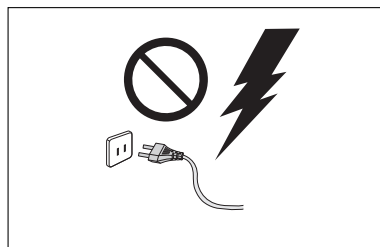

יש להוציא את תקע זרם החילופין מהשקע. קפיצות מתח כתוצאה מברקים עלולות לגרום נזק למכשיר.

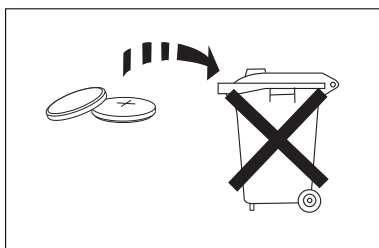

הסוללות המשמשות במכשיר זה מכילות כימיקלים מזיקים לסביבה. אין להשליך יחד עם האשפה הביתית. אין להשליך סוללות לאש. אין לקצר או לפרק את הסוללות או לגרום להן להתחממות יתר. קיימת סכנת התפוצצות אם הסוללה מוחלפת באופן שגוי. החלף את הסוללה באותו סוג או בסוג שווה ערך בלבד.

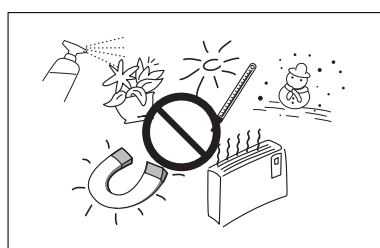

הגנו על המכשיר מפני נזלים (למשל, אל תקרבו אליו אגרטלים), חום גבוה (מאח בוערת, למשל) או ציוד היוצר שדה מגנטי או חשמלי חזק. נתקו את כבל החשמל משקע החשמל אם המכשיר ניזוק. המוצר שלכם לא נועד לשימוש תעשייתי. מוצר זה נועד לשימוש אישי בלבד. עיבוי עלול להיווצר במידה והמכשיר אוסח בטמפרטורה נמוכה. אם מובילים את המכשיר בחורף, יש להמתין כשעתיים עד שטמפרטורת המכשיר תגיע לטמפרטורת החדר לפני השימוש.

אזהרה, אין לבלוע את הסוללה, סכנת כווייה כימית [השלט רחוק שהגיע עם] מוצר זה מכיל סוללת כפתור. במקרה של בליעת סוללת הכפתור, היא עלולה לגרום לכוויות פנימיות תוך שעתיים ולהוביל למוות. יש לשמור סוללות חדשות וישנות הרחק מהישג ידם של ילדים. אם תא הסוללה לא נסגר כהלכה, הפסק להשתמש במוצר ושמור אותו הרחק מילדים. אם אתה סבור שייתכן שסוללות נבלעו או הושמו בתוך חלק כלשהו של הגוף, פנה מיד לקבלת טיפול רפואי.



תוכן עניינים

23 פונקציות	2 התחלה
23 מצב כניסה	2 מאפיינים
24 Bluetooth	3 מידע אודות בטיחות
27 עדכון תוכנה	6 מה כולל המכשיר
28 פתרון בעיות	7 תיאור
28 פתרון בעיות	7 לוח עליון/קדמי
29 נספח	8 לוח אחורי/תחתון
29 מפרטים	9 שלט רחוק
	11 התקנה
	11 התקנת התקנת Soundbar
	11 התקנת מתקן התלייה
	14 חיבור ה-Soundbar למעמד הטלוויזיה
	14 התקנת Soundbar למעמד חופשי
	15 חיבורים
	15 חיבור הסאבוופר
	17 התחברות לטלוויזיה
	17 חיבורים לטלוויזיה באמצעות כבל HDMI (דיגיטלי)
	17 חיבורים לטלוויזיה באמצעות כבל אופטי (דיגיטלי)
	18 TV SoundConnect
	20 חיבורים להתקן חיצוני
	20 כבל HDMI
	20 כבל אופטי או AUX
	21 USB

תרשימים ואיורים במדריך למשתמש זה ניתנים לצורכי עיון בלבד וייתכן שיהיו שונים ממראה המוצר בפועל.

מה כולל המכשיר


לפני העיון במדריך למשתמש

קראו את המושגים שלהלן לפני קריאת המדריך למשתמש.

◀ סמלים הנמצאים בשימוש במדריך

סמל	מונח	הגדרה
	זהירות	מצוין מקרים שבהם הפונקציה אינה פועלת או שההגדרות בוטלו.
	הערה	מצוין המלצות או הוראות בעמוד שעוזרות לתפעול כל פונקציה.

בדקו אם האביזרים שלהלן מצורפים למכשיר.



כבל HDMI



מתאם DC



כבל חשמל : 2 כ"א




שלט רחוק / סוללת ליתיום (3V : CR2032)



תלייה על הקיר : 2 כ"א




מחזיק לקיבוע תלייה : 2 כ"א



מדריך למשתמש



כבל USB




מדריך להתקנה על הקיר

- עיצוב האביזרים עשוי להיות שונה מהאביזרים המוצגים באיורים שלעיל.
- השתמשו כבל ה-USB הייעודי לחיבור התקני USB חיצוניים למכשיר.




לוח עליון/קדמי

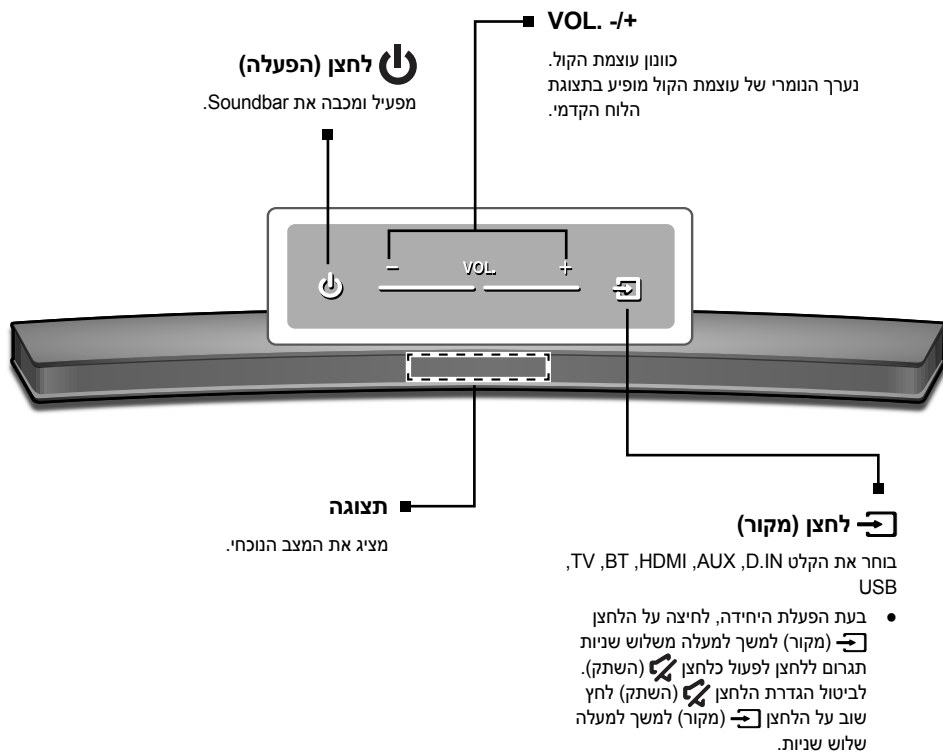

- לאחר חיבור כבל המתח, לחצן ההפעלה יעבוד תוך ארבע עד שש שניות.
- לאחר שתפעילו את המכשיר, ההשמעה תשתהה למשך 4 עד 5 שניות לפני שיושמעו צלילים.
- אם ברצונך לשמוע צליל מה-Soundbar בלבד, עליך לכבות את הרמקולים של הטלוויזיה דרך התפריט Audio Setup (הגדרות שמע). עיינו בהוראות השימוש המסופקות עם הטלוויזיה שלכם.



לוח אחורי/תחתון

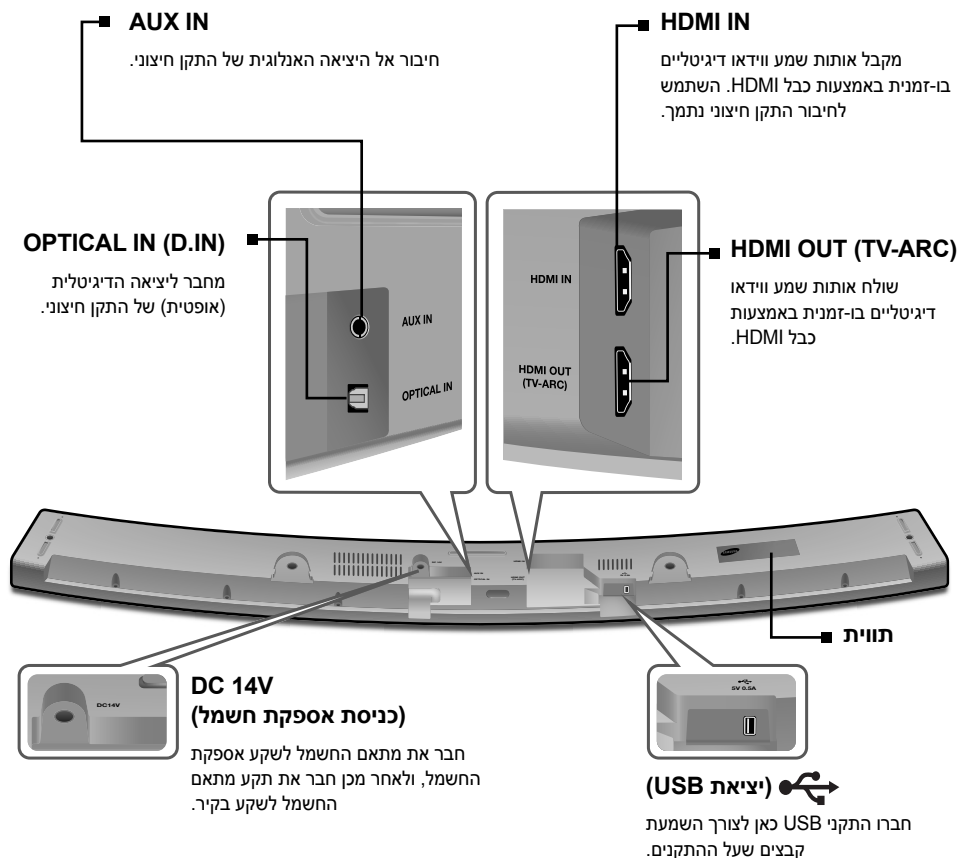

- בעת ניתוק כבל החשמל של מתאם החשמל מהשקע בקיר, אחזו בתקע עצמו. אין למשוך את הכבל כדי לנתקו.
- אין לחבר מכשיר זה או רכיבים אחרים שלו אל שקע החשמל עד להשלמת כל החיבורים בין הרכיבים.



שלט רחוק

HEB

SOURCE
לחץ כדי לבחור מקור המחובר ל-Soundbar.

השתק
ניתן להנמיך את עוצמת הקול לאפס בלחיצת כפתור.
לחצו שנית כדי לחזור אל עוצמת הקול הקודמת שהושמעה.

חזור
ניתן להגדיר את הפונקציה חזור במהלך השמעה מהתקן USB.
OFF - REPEAT : מבטל את ההשמעה החוזרת.
TRACK - REPEAT : השמעת הרצועה שוב ושוב.
ALL - REPEAT : השמעת כל הרצועות שוב ושוב.
RANDOM - REPEAT : השמעת הרצועות בסדר אקראי.
(ניתן להשמיע שוב רצועה שכבר הושמעה.)


דילוג קדימה
אם יש יותר מקובץ אחד על ההתקן שממנו אתה משמיע ואתה לוחץ על הלחצן **▶▶**,
הקובץ הבא ייבחר.

SOUND CONTROL
לחץ כדי לבחור **BASS**, **TREBLE** או **AUDIO SYNC**. לאחר מכן השתמש בלחצנים **▶▶**, **◀◀** כדי לכוון את עוצמת הטריבל, בס בין 6- לבין 6+.
לחץ והחזק את הלחצן **SOUND CONTROL** למשך כחמש שניות כדי לכוון את הצליל עבור כל פס תדרים: 150 Hz, 300 Hz, 600 Hz, 1.2 KHz, 2.5 KHz, 5 KHz, 10 KHz, ו-SW ניתנים לבחירה וניתן לכוון כל אחד מהם אלו בין 6- לבין 6+.
אם Soundbar מחובר לטלוויזיה דיגיטלית והווידאו לא מסונכרן עם השמע, לחץ על לחצני ה-**SOUND CONTROL** כדי לסנכרן את השמע עם הווידאו. השתמש בלחצני **▶▶**, **◀◀** כדי להגדיר את זמן השהיית השמע בין 0 אלפיות שנייה ל-300 אלפיות שנייה. במצב USB, מצב טלוויזיה ומצב BT, ייתכן שהפונקציית Audio Sync לא תפעל.

AUTO POWER
לחץ על הלחצן **AUTO POWER** כדי להפעיל או לכבות את הפונקציית Anynet+ (ברירת מחדל: **Auto Power Link OFF** / **ON - ANYNET+** או **OFF - POWER LINK** / **ON - ANYNET+**). הפונקציית Anynet+ מאפשרת לך לשלוט על ה-Soundbar באמצעות השלט מטלוויזיה Samsung תואמת Anynet+. על ה-Soundbar להיות מחובר לטלוויזיה באמצעות כבל HDMI.
* Auto Power Link
מסנכרן את ה-Soundbar למקור אופטי מחובר באמצעות השקע האופטי כדי שהוא יופעל באופן אוטומטי כשתפעיל את הטלוויזיה. (ראו עמוד 18)

- Samsung Soundbar הוא שם קנייני של Samsung.
- הפעל את הטלוויזיה באמצעות השלט רחוק שלה.



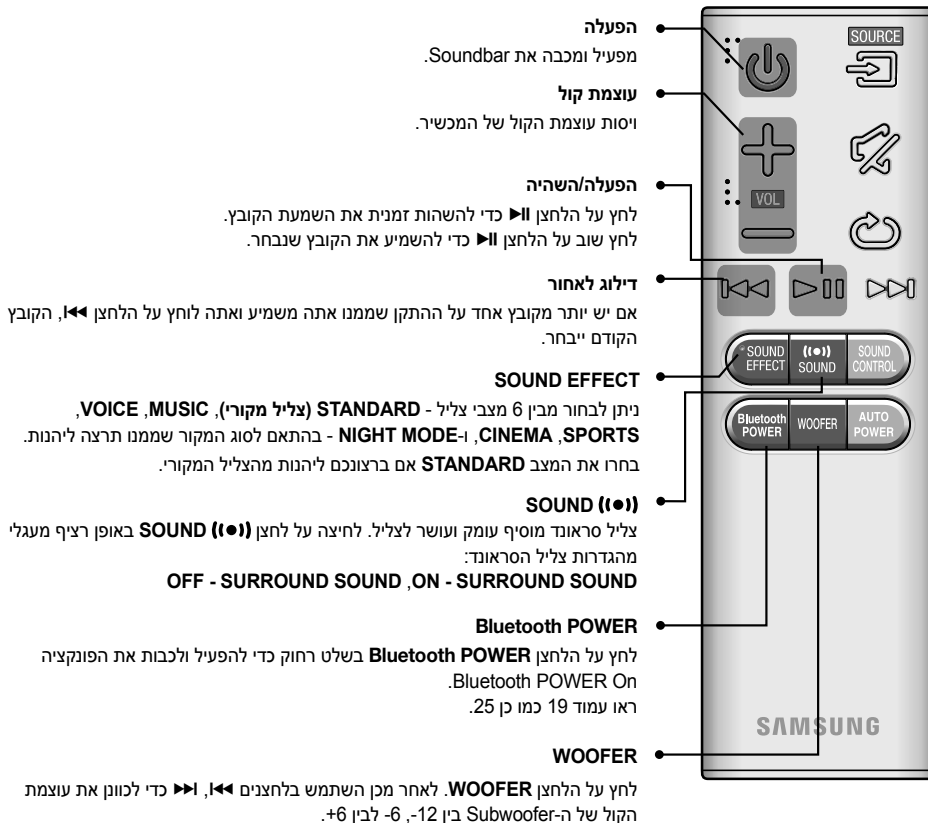

התקנת סוללות בשלט הרחוק




התקנת התקנת SOUNDBAR


התקנת מתקן התלייה

◀ אמצעי זהירות בעת ההתקנה


- התקינו על קיר אנכי בלבד.
- הימנע מהתקנה במיקום בעל טמפרטורה או לחות גבוהים, או על קיר שאינו יכול לשאת את משקל המכשיר.
- בדקו את חוזק הקיר. אם הקיר אינו חזק מספיק לצורך תליית המכשיר, חזקו את הקיר או התקינו את המכשיר על קיר אחר המסוגל לתמוך במשקל המכשיר.
- רכוש והשתמש בבורגי קיבוע המתאימים לסוג הקיר שעליו אתה רוצה לתלות את המכשיר (גבס, מתכת, עץ וכו').
- אם ניתן, הבריגו את בורגי הקיבוע לדיבלים בקיר.
- קנה ברגים להרכבה על הקיר בהתאם לסוג ועובי הקיר שעליו תתקין את ה-Soundbar.
- קוטר: M5
- אורך: מומלץ L 35 מ"מ ומעלה
- חברו כבלים מהמכשיר להתקנים חיצוניים לפני התקנתו על הקיר.
- ודאו שהמכשיר כבוי ומנותק מהחשמל לפני שאתם מתקינים אותו. הדבר עלול לגרום להתחשמלות.

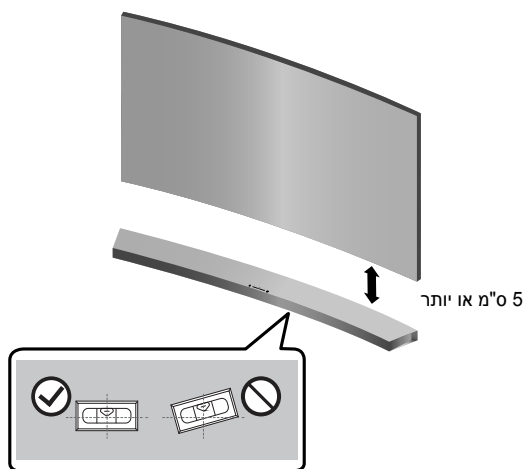


1. מקם את מנחה ההתקנה על הקיר.
- על מחה ההתקנה להיות מפולס.
 - אם הטלויזיה מותקנת על הקיר, התקן את ה-Soundbar לפחות 5 ס"מ מתחת לטלויזיה.

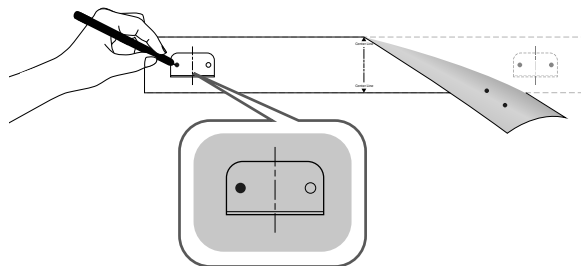


2. סמן בעט על הקיר את מיקום מעבר הברגים, ולאחר מכן הסר את מנחה ההתקנה. לאחר מכן, קדח חורים עבור הברגים באמצעות מקדח בקוטר המתאים.

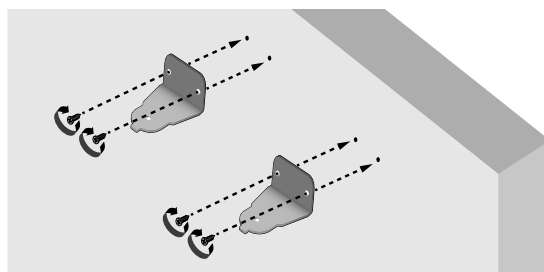

3. הדק את התלייה על הקיר (2 כ"א) ואת הברגים למיקומים המסומנים.

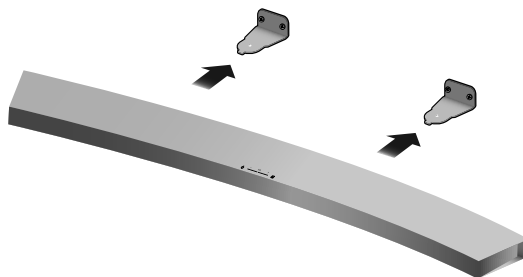

4. הרם את המוצר לאחר הכנסת התלייה על הקיר כמתואר.

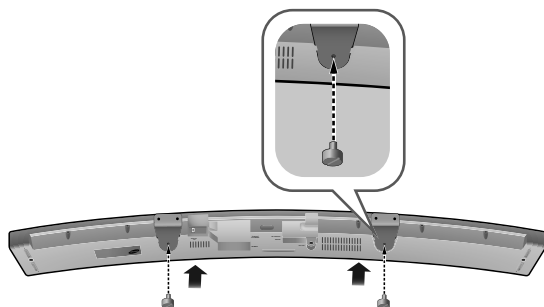

5. הכנס והדק את **מחזיק לקיבוע תלייה** לתוך כל. חור בתחתית המוצר. המוצר מקובע אל התלייה על הקיר.




- אין להיתלות על היחידה המותקנת ויש להיזהר שלא תקבל מכה או תיפול.
- יש לחבר את היחידה היטב לקיר כדי שלא תיפול. נפילת היחידה עלולה לגרום לפגיעה או לנזק למוצר.
- אם המכשיר מותקן על קיר, הקפידו שילדים לא ימשכו בכבלים המחוברים אליו מכיוון שהדבר עלול לגרום לנפילת המכשיר.
- לביצועים אופטימליים של התקנה על הקיר, אם הטלוויזיה מותקנת על הקיר, התקן את מערכת הרמקולים לפחות 5 ס"מ מתחת לטלוויזיה.
- לבטיחותך, אם אינך מתקין את היחידה על הקיר, התקן אותה על משווח ישר שהיא לא עשויה ליפול ממנו.

חיבור ה-SOUNDBAR למעמד הטלוויזיה

ניתן לחבר את ה-Soundbar למעמד הטלוויזיה אם יש לך טלוויזיית Samsung בעלת מעמד התואם ל-Soundbar זה.

- Soundbar זה תואם לדגמים JU6700, JU6500 ו-JU7500, 48 אינץ', 55 אינץ' ו-65 אינץ', JU6610 - 48 אינץ' ו-55 אינץ', Samsung 2015 טלוויזיות קמורות. בקר בדף הבית של Samsung Electronics (www.Samsung.com) כדי לראות רשימה מלאה של הדגמים התואמים.
- לא ניתן להתקין Soundbar זה לטלוויזיות שאינן תואמות, או במבנה מתלה הטלוויזיה או מעמד הטלוויזיה.

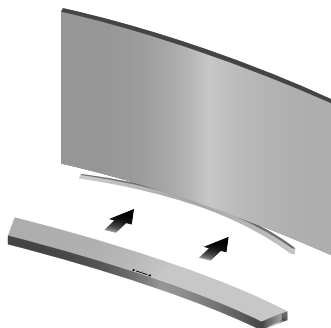

1. יישר את מרכז ה-Soundbar עם המרכז של הבסיס של הטלוויזיה, ולאחר מכן דחוף אותו על על המעמד עד הסוף כמתואר באיור. היזהר שהטלוויזיה לא תיפול.

התקנת ה-SOUNDBAR למעמד חופשי



1. מרכז את ה-Soundbar באזור השטוח שבחזית הטלוויזיה.



- התקן אותו על משטח ישר ויציב



- אין לחבר את כבל החשמל של מוצר זה או של הטלוויזיה לשקע החשמל עד להשלמת כל החיבורים בין הרכיבים.
- לפני העברה או התקנה של מוצר זה, יש להקפיד לכבות אותו ולנתק את כבל המתח.


חיבור הסאבוופר

חיבור אוטומטי לסאבוופר

- על היחידה הראשית והסאבוופר להתחבר (חיבור אלחוטי) כאשר מפעילים את היחידה הראשית והסאבוופר.
- אם הוא מחובר לחלוטין, נורית ה-LED הנחולה בסאבוופר תפסיק להבהב.

חיבור ידני לסאבוופר

מזהה ההתקשרות של הסאבוופר מוגדר על-ידי היצרן, וההתקשרות (חיבור אלחוטי) בין היחידה הראשית לסאבוופר צריכה להתבצע באופן אוטומטי בעת הפעלתם. אם המחונן Link לא נדלק בעת הפעלת היחידה הראשית והסאבוופר, הגדר את המזהה באופן הבא. השלם תהליך זה תוך 30 שניות לאחר תחילת ההבהוב של המחונן 'קישור' בסאבוופר.

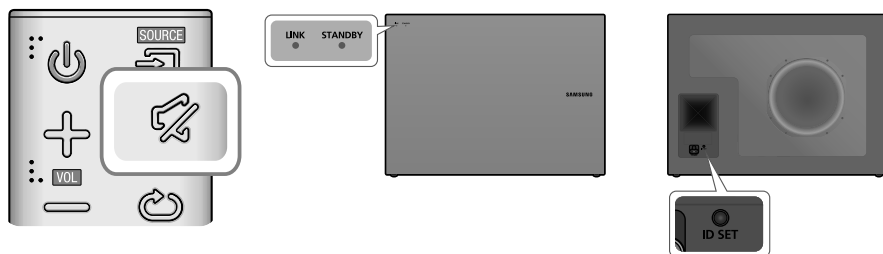

1. חברו את המכשיר ואת הסאבוופר לחשמל.
2. לחצו על הלחצן **ID SET** בגב הסאבוופר בעזרת חפץ קטן וחד למשך 5 שניות.
 - המחונן **STANDBY** יכבה והמחונן **LINK** (נורית כחולה) יבהב במהירות.
3. כאשר היחידה הראשית כבויה (במצב **STANDBY**), לחץ והחזק את  (השתק) בשלט רחוק למשך חמש שניות.
4. ההודעה **ID SET** תופיע על תצוגת ה-Soundbar.
5. כדי לסיים את הקישור, הפעל את היחידה הראשית כאשר הנורית הכחולה של הסאבוופר מהבהבת.
 - כעת היחידה הראשית והסאבוופר אמורים להיות מקושרים (מחוברים).
 - המחונן קישור (נורית כחולה) על גבי הסאבוופר צריכה להיות דלוק.
 - אם המחונן קישור לא מאיר בכחול, תהליך הקישור נכשל. כבה את היחידה הראשית והתחל שוב משלב 2.
 - תוכלו ליהנות מצליל משופר מהסאבוופר האלחוטי על-ידי בחירת אפקט הצליל. (ראו עמוד 10)




- לפני העברה או התקנה של המוצר, יש להקפיד לכבות אותו ולנתק את כבל המתח.
- אם היחידה הראשית כבויה, הסאבוופר האלחוטי יהיה במצב המתנה והנורית 'המתנה' בצד העליון תידלק לאחר שהמחונן 'קישור' (נורית כחולה) תהבהב למשך 30 שניות.
- אם אתה משתמש בהתקן העושה שימוש באותו התדר (2.4GHz) של ה-Soundbar בקרבת ה-Soundbar, עלולה להיווצר הפרעה.
- מרחק השידור של האות האלחוטי בין היחידה הראשית לסאבוופר הוא בערך 10 מטר אבל עשוי להשתנות בהתאם לסביבת הפעלה.
- אם יש קיר בטון-פלדה או קיר מתכת בין המכשיר לבין הסאבוופר האלחוטי, המערכת עשויה לא לפעול בכלל מכיוון שהאות האלחוטי לא יכול לחדור דרך מתכת.
- אם היחידה המרכזית אינה מייצרת חיבור אלחוטי, עקוב אחר שלבים 1-5 בדף הקודם על מנת להגדיר מחדש את החיבור בין היחידה המרכזית והסאבוופר האלחוטי.



- אנטנת הקליטה האלחוטית מובנית בתוך הסאבוופר האלחוטי. יש להרחיק את המכשיר ממים ומלחות.
- למיטוב חוויית ההאזנה, ודאו שהאזור שמסביב לסאבוופר האלחוטי נקי ממכשולים.

התחברות לסטוויזיה


חיבורים לסטוויזיה באמצעות כבל HDMI (דיגיטלי)

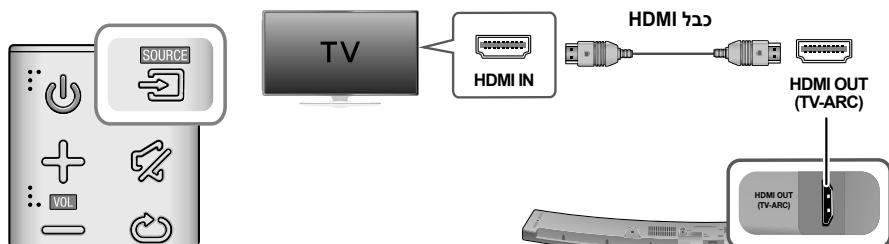

1. חבר כבל HDMI מהכניסה **HDMI OUT (TV-ARC)** שבגב המוצר ליציאה **HDMI IN** שבסטוויזיה שלך.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

- HDMI הנו ממשק המאפשר את השידור הדיגיטלי של וידאו וקבצי שמע באמצעות חיבור אחד בלבד.
- אם יש לסטוויזיה יציאת ARC, חבר את כבל ה-HDMI ליציאה **HDMI IN (ARC)**.
- מומלץ במידת האפשר להשתמש בכבל HDMI ללא ליבה. אם נעשה שימוש בכבל HDMI עם ליבה, השתמש באחד בעל ליבה של פחות מ-14 מ"מ.
- יש להפעיל את Anynet+.
- פונקציה זו אינה זמינה אם כבל ה-HDMI לא תומך ב-ARC.

חיבורים לסטוויזיה באמצעות כבל אופטי (דיגיטלי)

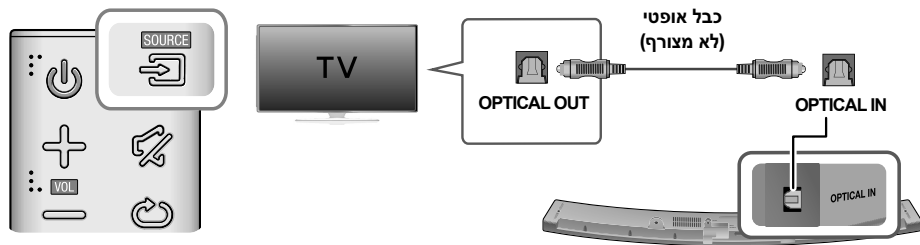

1. חבר את **OPTICAL IN** (שמע) ב-Soundbar לשקע **OPTICAL OUT** של הטלוויזיה.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

Auto Power Link ◀

אם חיברת את היחידה הראשית לטלוויזיה באמצעות כבל אופטי, הגדר את הפונקציה Auto Power להיות מופעלת על-מנת שה-Soundbar יופעל באופן אוטומטי כאשר מפעילים את הטלוויזיה.

תצוגה	AUTO POWER LINK
ON - POWER LINK / OFF - ANYNET+	פעיל
OFF - POWER LINK / ON - ANYNET+	כבוי

1. חבר את ה-Soundbar והטלוויזיה בכבל 'אופטי'. (לא מצורף)
2. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.
3. לחץ על הלחצן **AUTO POWER** בשלט רחוק כדי להפעיל או לכבות את הפונקציה Auto Power Link.

• בהתאם להתקן המחובר, ייתכן ש-Auto Power Link לא תפעל.



TV SOUNDCONNECT

ניתן ליהנות מצליל הטלוויזיה דרך ה-Soundbar שמחובר לטלוויזיית Samsung שתומכת בפונקציית TV SoundConnect.



1. הפעל את הטלוויזיה ואת ה-Soundbar.
 - הפעל את התפריט של הטלוויזיה.
 - עבור ל"הגדרות מקול" בכרטיסיה "צליל".
 - הגדר את התפריט "הוספת מקול חדש" למצב "מופעל".
2. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **TV**.
3. בטלוויזיה תופיע הודעה השואלת אם להפעיל את הפונקציית TV SoundConnect.
4. בחר **כן** כדי לסיים את חבור הטלוויזיה וה-Soundbar באמצעות השלט רחוק של הטלוויזיה.



- העברת המצב של Soundbar מטלוויזיה למצב אחר תסיים באופן אוטומטי את TV SoundConnect.
- כדי לחבר את ה-Soundbar לטלוויזיה אחרת, יש לסיים את החיבור הקיים.
- סיים את החיבור לטלוויזיה הקיימת, ולאחר מכן לחץ על הלחצן ► בשלט רחוק למשך יותר מחמש שניות כדי להתחבר לטלוויזיה אחרת.



- הפונקציה TV SoundConnect (SoundShare) נתמכת על-ידי חלק מטלוויזיות Samsung שהושקו משנת 2012. בדוק אם הטלוויזיה שלך תומכת בפונקציה TV SoundConnect (SoundShare) לפני שאתה מתחיל. (למידע נוסף, עיין במדריך למשתמש של הטלוויזיה).
- אם טלוויזיית Samsung הושקה לפני 2014, בדוק בתפריט ההדרות של SoundShare.
- אם המרחק בין הטלוויזיה לבין Soundbar עולה על 10 מטר, ייתכן שהחיבור לא יהיה יציב או השמע עלול לגמגם. במקרה כזה, מקם מחדש את הטלוויזיה או ה-Soundbar כך שהם יימצאו בטווח הפעולה, ולאחר מכן הקם מחדש את החיבור של TV SoundConnect.
- טווח פעולה של TV SoundConnect:
 - טווח ההפעלה המומלץ לצימוד: עד 2 מטר
 - טווח פעולה מומלץ: עד 10 מטר
- הלחצנים 'הפעל/השהה', 'הבא' ו'הקודם' ב-Soundbar או בשלט רחוק של ה-Soundbar לא שולטים על הטלוויזיה.

◀ שימוש בפונקציה Bluetooth POWER On

הפונקציה Bluetooth POWER On זמינה אחרי חיבור מוצלח של ה-Soundbar לטלוויזיה תואמת Bluetooth באמצעות TV SoundConnect. כאשר הפונקציה Bluetooth POWER On מופעלת, הפעלה או כיבוי של הטלוויזיה תפעיל או תכבה גם ה-Soundbar.

1. חבר את הטלוויזיה ל-Soundbar באמצעות הפונקציה TV SoundConnect.
2. לחץ על לחצן **Bluetooth POWER** בשלט רחוק של ה-Soundbar. "ON - BLUETOOTH POWER" יופיע בתצוגה של ה-Soundbar.
 - **ON - BLUETOOTH POWER**: Soundbar יופעל ויכובה יחד עם הטלוויזיה.
 - **OFF - BLUETOOTH POWER**: Soundbar ייכבה רק כשתכבה את הטלוויזיה.




- פונקציה זו נתמכת על-ידי חלק מטלוויזיות Samsung שהושקו משנת 2013 ואילך.

חיבורים להתקן חיצוני

HDMI כבל


HDMI הוא ממשק דיגיטלי סטנדרטי לחיבור מכשירים כגון טלוויזיות, מקרנים, גני DVD, גני Blu-ray, ממירים ועוד. בגלל ש-HDMI משדר את איכות האות הדיגיטלי המקסימלי, ניתן ליהנות מווידאו ושמע מעולים כפי שנוצרו במקור הדיגיטלי.

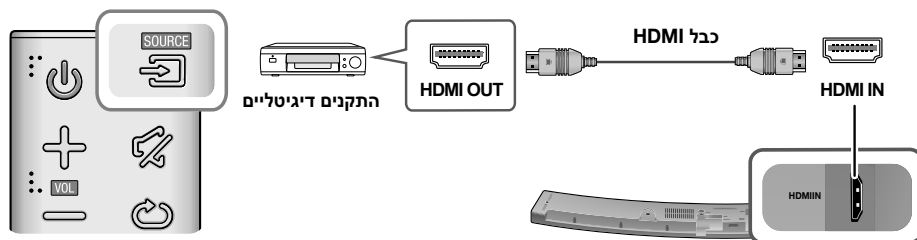

1. חבר כבל HDMI מהכניסה **HDMI IN** שבגב המוצר ליציאה **HDMI OUT** שבמכשיר החשמלי שלך.
2. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **HDMI**.

כבל אופטי או AUX

היחידה מגיעה עם שקע דיגיטלי אופטי אחד ושקע שמע אנלוגי אחד כך שיש שתי דרכים לחבר אותה להתקנים חיצוניים.

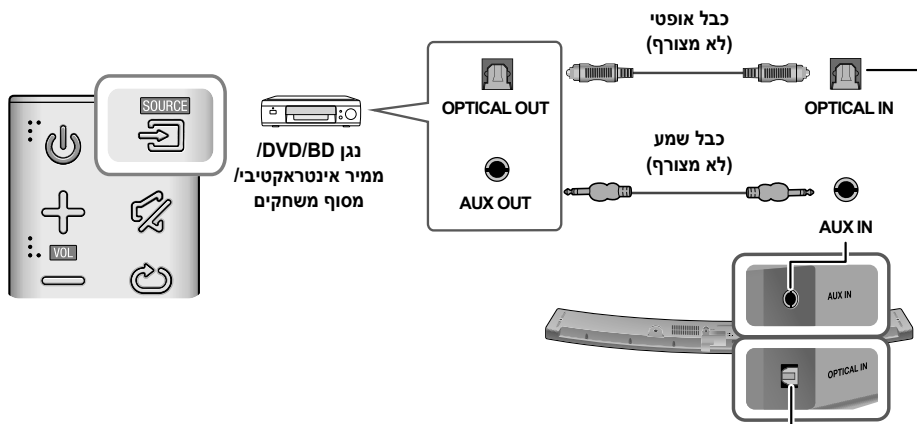

◀ כבל AUX

1. חבר את **AUX IN** (שמע) ביחידה הראשית לשקע **AUDIO OUT** של התקן המקור.
2. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **AUX**.


◀ כבל אופטי

1. חבר את **OPTICAL IN** (שמע) ביחידה הראשית לשקע **OPTICAL OUT** של התקן המקור.
2. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

USB

ניתן להשמיע קובצי מוזיקה השמורים על התקני אחסון USB דרך ה-Soundbar.

יציאת USB

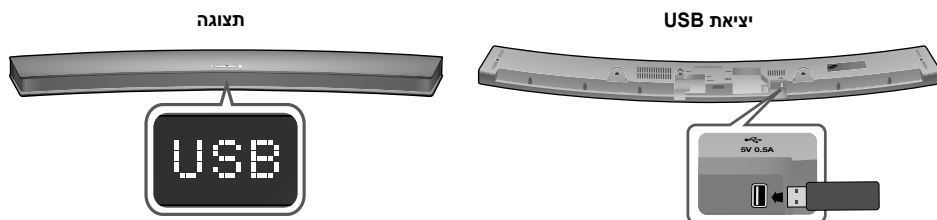

1. חבר את התקן ה-USB ליציאת ה-USB של המוצר.
2. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **USB**.
3. **USB** יופיע במסך.
 - חיבור ה-Soundbar להתקן ה-USB הושלם.
 - המערכת נכבית באופן אוטומטי (Auto Power Off) אם לא מחובר אליה התקן USB במשך יותר מ-25 דקות.

◀ לפני חיבור התקן USB

שימו לב לנתונים הבאים:

- אם שם הקובץ בהתקן ה-USB ארוך מ-10 תווים, הוא לא מוצג ב-Soundbar.
- ייתכן שמכשיר זה לא יהיה תואם לסוגים מסוימים של התקני אחסון USB.
- המכשיר תומך במערכות קבצים מסוג FAT16 ו-FAT32.
- מערכת הקבצים NTFS אינה נתמכת.
- חבר את התקן ה-USB ישירות אל כניסת ה-USB שבמכשיר. אחרת, ייתכן שתיווצר בעיית תאימות של התקן ה-USB.
- אין לחבר אל המוצר התקני אחסון מרובים באמצעות קורא כרטיסים משולב. הוא עשוי שלא לפעול כהלכה.

- המכשיר אינו תומך בפרוטוקולי PTP של מצלמות דיגיטליות.
- אין לנתק את התקן ה-USB בזמן שהוא מעביר קבצים.
- המכשיר אינו מנגן קובצי מוסיקה בהגנת DRM (MP3, WMA) שהתקבלו מאתר מסחרי.
- המכשיר אינו תומך בכוננים קשיחים חיצוניים.
- המכשיר אינו תומך בטלפונים ניידים.
- רשימת תאימות:



קצב סיבית	טווח דגימה	קודק	הרחבה
kbps 320 ~ kbps 80	KHz 48 ~ KHz 16	MPEG 1 Layer2	mp3.*
kbps 320 ~ kbps 80	KHz 48 ~ KHz 16	MPEG 1 Layer3	
kbps 320 ~ kbps 80	KHz 48 ~ KHz 16	MPEG 2 Layer3	
kbps 320 ~ kbps 80	KHz 48 ~ KHz 16	MPEG 2.5 Layer3	
kbps 128 ~ kbps 56	KHz 48 ~ KHz 16	Wave_Format_MSAudio1	wma.*
kbps 128 ~ kbps 56	KHz 48 ~ KHz 16	Wave_Format_MSAudio2	
kbps 320 ~ kbps 48	KHz 48 ~ KHz 16	AAC	aac.*
kbps 192 ~ kbps 128 kbps 320 ch 5.1	KHz 96 ~ KHz 16	AAC-LC	
kbps 64 ~ kbps 48 kbps 320 ch 5.1	KHz 96 ~ KHz 24	HE-AAC	
עד 3000 kbps	KHz 48 ~ KHz 16	-	wav.*
kbps 500 ~ kbps 50	KHz 48 ~ KHz 16	OGG 1.1.0	ogg.*
עד 3000 kbps	KHz 96 ~ KHz 16	FLAC 1.2.1 ,FLAC 1.1.0	flac.*

- אם יש יותר מדי תיקיות וקבצים שמורים בהתקן ה-USB, הקריאה עשויה להימשך זמן מה.



מצב כניסה

לחץ על הלחצן  (מקור) שבלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את המצב שאתה רוצה.

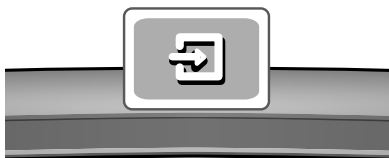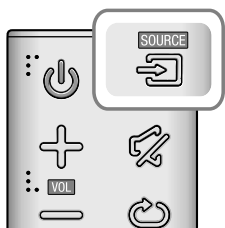

מצב כניסה	תצוגה
כניסה דיגיטלית אופטית קלט ARC (HDMI OUT)	D.IN
כניסת AUX	AUX
כניסת HDMI	HDMI
מצב BLUETOOTH	BT
TV SoundConnect	TV
מצב USB	USB

המכשיר נכבה באופן אוטומטי במקרים הבאים:


- מצב ARC/USB/TV/BT/HDMI/D.IN
- אם אין אות שמע במשך 25 דקות.
- מצב AUX
- די להפעיל או לכבות את הפונקציה Auto Power Down לחץ והחזק את הלחצן **▶** למשך 5 שניות.
- OFF - AUTO POWER DOWN / ON - AUTO POWER DOWN** יופיע בתצוגה.
- אם כבל ה-AUX מנותק למשך 25 דקות.
- אם לא מתקבל קלט KEY במשך שמונה שעות בזמן שכבל AUX מחובר.

BLUETOOTH

ניתן לחבר למכשיר ה-Soundbar התקן Bluetooth כדי ליהנות ממוזיקה המושמעת בסטריאו באיכות גבוהה, באופן אלחוטי בלבד!

לחיבור ה-SOUNDBAR להתקן BLUETOOTH

בדקו אם התקן ה-Bluetooth תומך בפונקציית אוזניות הסטריאו תואמת ה-Bluetooth.

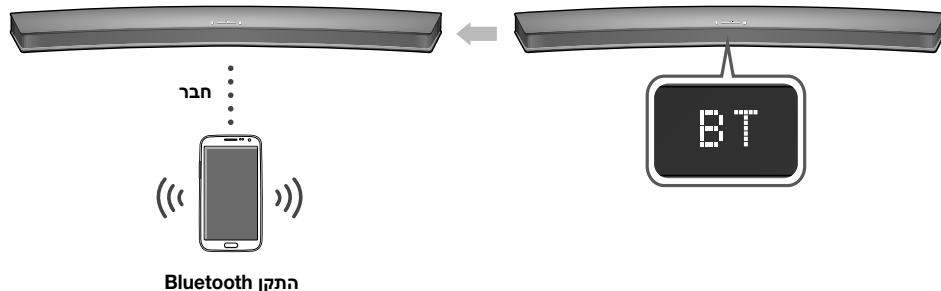

1. לחץ על הלחצן  (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **BT**.
 - תוצג ההודעה **BT READY** בתצוגה הקדמית של ה-Soundbar.
2. בחרו בתפריט Bluetooth שבהתקן ה-Bluetooth שאותו תרצו לחבר. (עיינו במדריך למשתמש של התקן ה-Bluetooth)
3. בחרו באפשרות "**[Samsung] Soundbar J-Series**" מתוך הרשימה.
 - כאשר ה-Soundbar מחובר למכשיר Bluetooth, הוא יציג **[שם מכשיר Bluetooth]** ← **BT** בלוח הקדמי.
 - ניתן להציג את שם המוצר רק באנגלית. יוצג קו תחתון " _ " אם השם אינו באנגלית.
 - אם צימוד התקן ה-Bluetooth ל-Soundbar נכשל, מחקו את ה-"**[Samsung] Soundbar J-Series**" הקודם שמצא התקן ה-Bluetooth ובצעו חיפוש חדש עבור Soundbar.
4. השמיעו מוזיקה בהתקן המחובר.
 - באפשרותכם להאזין למוזיקה המושמעת בהתקן ה-Bluetooth המחובר על גבי המערכת Soundbar.
 - במצב **BT**, הפונקציות הפעלה/השהייה/הבא/הקודם אינן זמינות. אולם, פונקציות אלה זמינות במכשירי Bluetooth התומכים ב-AVRCP.



- אם תופיע בקשה לקוד PIN בעת חיבור מכשיר Bluetooth, הזן <0000>.
- ניתן לצמד התקן Bluetooth אחד בלבד בכל פעם.
- חיבור Bluetooth יסתיים כאשר Soundbar יועבר למצב כבוי.
- ייתכן שה-Soundbar לא יבצע חיפוש או חיבור Bluetooth כהלכה בתנאים הבאים:
 - אם קיים שדה חשמלי חזק מסביב ל-Soundbar.
 - אם מספר התקני Bluetooth מוצמדים בו-זמנית ל-Soundbar.
 - אם התקן ה-Bluetooth כבוי, אינו נמצא במקומו או שיש בו תקלה.
 - שימו לב שישנם התקנים כגון מיקרופונים, מתאמי LAN אלחוטיים, מנורות פלואורסנט ותנורי גז המשתמשים באותו טווח תדרים שבו משתמש התקן ה-Bluetooth, והעשויים לגרום להפרעות חשמליות.
- ה-Soundbar תומך בנתוני SBC (44.1 kHz, 48 kHz).
- יש לחבר התקן Bluetooth התומך בפונקציית A2DP (AV) בלבד.
- לא ניתן לחבר את ה-Soundbar להתקן Bluetooth התומך בפונקציית HF (ללא התערבות המשתמש) בלבד.
- לאחר צימוד ה-Soundbar להתקן Bluetooth, בחירה של '[Samsung] Soundbar J-Series' מרשימת ההתקנים הסרוקים של ההתקן תשנה באופן אוטומטי את ה-Soundbar למצב BT.
- זמין רק אם Soundbar מופיע ברשימת המכשירים המוצמדים של מכשיר ה-Bluetooth.
- (על מכשיר ה-Bluetooth וה-Soundbar לבצע הצמדה מראש לפחות פעם אחד).
- Soundbar יופיע ברשימת המכשירים שנסרקו של מכשיר ה-Bluetooth רק כאשר Soundbar מציג BT READY.
- במצב TV SoundConnect, לא ניתן להצמיד את ה-Soundbar למכשיר Bluetooth אחר.

(BLUETOOTH POWER) BLUETOOTH POWER ON

כאשר הפונקציה Bluetooth Power On מופעלת וה-Soundbar כבוי, אם התקן Bluetooth שהיה מוצמד בעבר ינסה לבצע הצמדה ל-Soundbar, ה-Soundbar יופעל באופן אוטומטי.

1. לחץ על **Bluetooth POWER** בשלט רחוק כאשר ה-Soundbar מופעל.

2. **ON - BLUETOOTH POWER** יופיע בתצוגת ה-Soundbar.

לניתוק התקן ה-BLUETOOTH מה-SOUNDBAR

באפשרותכם לנתק את התקן ה-Bluetooth מ-Soundbar. לקבלת הוראות יש לעיין במדריך למשתמש של התקן ה-Bluetooth.

- Soundbar ינותק.
- כאשר Soundbar מנותק מהתקן ה-Bluetooth device, בתצוגה הקדמית של Soundbar יופיע **BT DISCONNECTED**.

לניתוק SOUNDBAR מהתקן ה-BLUETOOTH

לחץ על הלחצן **SOURCE** שבשלט רחוק או על הלחצן  (מקור) בלוח העליון של המוצר כדי לעבור ממצב BT למצב אחר או כדי לכבות את ה-Soundbar.

- התקן ה-Bluetooth המחובר ימתין זמן מסוים לתגובה מ-Soundbar לפני סיום החיבור. (זמן הניתוק עשוי להשתנות בהתאם להתקן ה-Bluetooth).



- במצב חיבור Bluetooth, חיבור ה-Bluetooth יאבד אם המרחק בין ה-Soundbar והתקן ה-Bluetooth עולה על הטווח האפשרי 10 מטר.
- Soundbar ייכבה באופן אוטומטי לאחר 25 דקות במצב מנוח.

◀ עוד על Bluetooth

- Bluetooth היא טכנולוגיה שמאפשרת להתקנים תואמי Bluetooth להתחבר בקלות אלה עם אלה באמצעות חיבורים אלחוטיים קצרים.
- התקן Bluetooth עשוי לגרום לרעשים או לתקלות, בהתאם לאופן השימוש, כאשר:
 - חלק מגופכם נוגע במערכת הקליטה/שידור של התקן ה-Bluetooth או ה-Soundbar.
 - השידורים מההתקן נחסמים על-ידי מכשולים כגון קיר, פינה או מחיצות משרדיות.
 - שידורי ההתקן משובשים על-ידי הפרעות חשמליות מהתקנים המשרדים באותו טווח תדרים, כגון מכשירים רפואיים, מיקרו-גלים ו-LAN אלחוטי.
- צמדו את ה-Soundbar עם התקן ה-Bluetooth תוך שמירת מרחק קצר.
- ככל שהמרחק בין ה-Soundbar לבין התקן ה-Bluetooth גדול יותר, איכות הקליטה תהיה גרועה יותר.
- אם המרחק יהיה גדול מטווח הפעולה של התקן ה-Bluetooth, החיבור יתנתק.
- באזורים בעלי איכות קליטה ירודה, ייתכן שחיבור ה-Bluetooth לא יפעל כהלכה.
- חיבור ה-Bluetooth פועל כהלכה רק כאשר הוא נמצא בקרבת המערכת. החיבור יתנתק באופן אוטומטי כאשר ההתקן יוצב מחוץ לטווח הפעולה. גם בתוך טווח הפעולה, ייתכן שאיכות הקול תיפגע בשל מכשולים כגון קירות או דלתות.
- התקן אלחוטי זה עשוי לגרום להפרעות חשמליות במהלך הפעלתו.

SAMSUNG AUDIO REMOTE ביישום

◀ התקן את היישום Samsung Audio Remote


כדי לשלוט על המוצר באמצעות ההתקן החכם והיישום Samsung Audio Remote, הורד את היישום Samsung Audio Remote בדרך החנות Google Play.

יפיש שוק : Samsung Audio Remote




◀ גישה ליישום Samsung Audio Remote

לאחר התקנת היישום Samsung Audio Remote, עקוב אחר ההוראות שביישום.

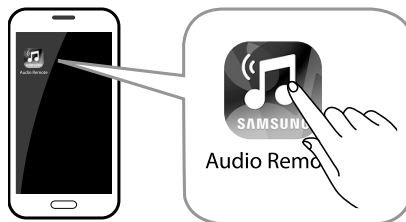

- הפונקציה APP תומכת רק בטלפונים ניידים מסוג Android המריצים Android OS 3.0 ומעלה.

עדכון תוכנה

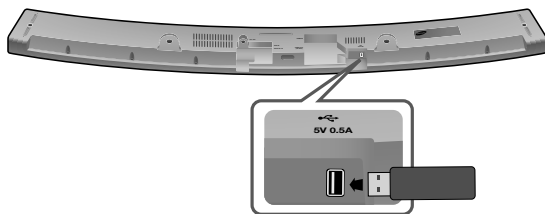

Samsung עשויה להציע בעתיד עדכונים לקושחת המערכת של Soundbar. במידה ומוצע עדכון, ניתן לעדכן את הקושחה על-ידי חיבור התקן USB עם עדכון הקושחה ליציאת ה-USB של ה-Soundbar. שימו לב שאם קיימים קובצי עדכון מרובים, עליך לטעון כל אחד בנפרד להתקן ה-USB ולהשתמש בו. בקר באתר Samsung.com או צור קשר עם מרכז התמיכה של Samsung כדי לקבל מידע נוסף על הורדת קובצי עדכונים.



- הכנס התקן USB המכיל את שדרוג הקושחה ליציאת ה-USB ביחידה הראשית.
- ייתכן ששדרוג הקושחה לא יפעל כהלכה אם קובצי שמע הנתמכים על-ידי ה-Soundbar שמורים בהתקן אחסון ה-USB.
- אין לכבות את המכשיר או לנתק את התקן ה-USB בעת החלת עדכונים. היחידה הראשית תכבה באופן אוטומטי לאחר שעדכון הקושחה יסתיים.
- לאחר העדכון, כל ההגדרות יתאפסו להגדרות היצרן. היחידה הראשית תכבה באופן אוטומטי לאחר שעדכון הקושחה יסתיים.
- שים לב שעדכון הקושחה מאפס גם את חיבור הסאבוופר. אם החיבור לסאבוופר לא מתבצע באופן אוטומטי לאחר העדכון, עיין בעמוד 15. אם עדכון הקושחה נכשל, אנו ממליצים לפרמט את התקן ה-USB שוב ב-FAT16 ולנסות שוב.
- לאחר השלמה של עדכון התוכנה, כבה את המוצר ולאחר מכן לחץ והחזק את הלחצן (▶ ||) בשלט רחוק למשך יותר 5 שניות. "INIT" יופיע בתצוגה והיחידה תכובה. העדכון הושלם.
- אין לפרמט את כונן ה-USB בפורמט NTFS. ה-Soundbar אינו תומך במערכת הקבצים NTFS.
- ייתכן שהתקן ה-USB אינו נתמך, בהתאם ליצרן.

פתרון בעיות

בטרם תפנו לקבלת שירות, בדקו את הפרטים שלהלן.

המכשיר אינו נדלק.	
• האם כבל החשמל מחובר לשקע?	← חברו את כבל החשמל לשקע.

פונקציה מסוימת אינה פועלת בעת לחיצה על הלחצן.	
• האם ישנו חשמל סטטי באוויר?	← נתקו את כבל החשמל וחברו אותו שוב.

לא נשמעים צלילים.	
• האם פונקציית ה-השתק פועלת?	← לחצו על הלחצן  (השתק) כדי לבטל את הפונקציה.
• האם עוצמת הקול מוגדרת לעוצמה הנמוכה ביותר?	← כוונן את עוצמת השמע.

השלט רחוק אינו פועל.	
• האם הסוללות מרוקנות?	← החליפו את הסוללות בסוללות חדשות.
• האם המרחק בין השלט רחוק לבין המכשיר גדול מדי?	← התקרבו למכשיר.

צימוד TV SoundConnect (צימוד לטלוויזיה) נכשל.	
• האם הטלוויזיה שלך תומכת ב-TV SoundConnect?	← Samsung TV SoundConnect נתמך בחלק מטלוויזיות Samsung שהושקו אחרי 2012. בדוק אם הטלוויזיה שלך תומכת ב-TV SoundConnect.
• האם הקושחה של הטלוויזיה מהגרסה האחרונה?	← עדכנו את הטלוויזיה לגרסת הקושחה העדכנית ביותר.
• האם אירעה תקלה בעת ההתחברות?	← צור קשר עם מרכז התמיכה של Samsung.
• אתחלו את מצב TV והתחברו שוב.	← לחץ לחיצה ארוכה על הלחצן  למשך חמש שניות כדי לאפס את חיבור TV SoundConnect.

נורית ה-LED האדומה בסאבוופר מהבהבת והסאבוופר אינו משמיע צליל.	
• ייתכן שהסאבוופר אינו מחובר ליחידה הראשית של המוצר.	← נסה לחבר שוב את הסאבוופר. (ראו עמוד 15)

הסאבוופר מזמזם ורוטט באופן ניכר.	
• נסה לכוון את רעידות הסאבוופר.	← לחץ על הלחצן WOOFER בשלט רחוק כדי לכוון את ערכו (בין -12, -6 לבין +6).

מפרטים

HEB

שם דגם		HW-J6001	
כללי	USB		A 0.5 / V 5
	משקל	המכשיר	2.7 ק"ג
		סאבופר (PS-WJ6001)	6.8 ק"ג
	מידות (רוחב x גובה x עומק)	המכשיר	129 x 47.5 x 1078 מ"מ
		סאבופר (PS-WJ6001)	154 x 335 x 452 מ"מ
	טווח הטמפרטורה בפעולה		°C +35 עד °C +5
	טווח אחוזי הלחות בפעולה		10 % עד 75 %
מגבר	דירוג צריכת חשמל	המכשיר	22 וואט/ערוז x 4, 6, THD, OHM = 10, 1 קילוהרץ
		סאבופר (PS-WJ6001)	168 וואט, 3, THD, OHM = 10, 100 הרץ
	יחס אות לרעש (קלט אנלוגי)		65 דציבלים
	הפרדה (1 קילוהרץ)		65 דציבלים

* הערכים של יחס אות לרעש, עיוות, הפרדה ורגישות שימושית מבוססים על המידות שנקבעו על פי הקווים מנחים של ארגון AES (Audio Engineering Society).

* מפרט נומינלי

- Samsung Electronics Co., Ltd שומרת את הזכות לשנות את המפרטים ללא התרעה.
- המשקל והמידות המצוינים הם משוערים.
- לקבלת מידע אודות אספקה וצריכת חשמל, עיינו בתווית המודבקת על-גבי המכשיר.

※ הודעת רשיון קוד פתוח

- לשאלות ובקשות בנוגע למקור פתוח, צור קשר עם Samsung בדוא"ל (oss.request@samsung.com).



© 2015 Samsung Electronics Co., Ltd. All rights reserved.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

© 2015 Samsung Electronics Co.,Ltd כל הזכויות שמורות.

יצירת קשר עם SAMSUNG WORLD WIDE

אם יש לכם שאלות או הערות הנוגעות למוצרי Samsung, אנא צרו קשר עם מרכז שירות הלקוחות של SAMSUNG.

Web Site	Contact Centre	Area
Africa ■		
www.samsung.com/support	0860 SAMSUNG (726 7864)	SOUTH AFRICA
	8007260000	BOTSWANA
	08 197 267 864	NAMIBIA
	0211 350370	ZAMBIA
	23052574020	MAURITIUS
	262508869	REUNION
www.samsung.com/africa_en/support	847267864 / 827267864	MOZAMBIQUE
	0800-726-7864	NIGERIA
	0800-10077 0302-200077	GHANA
www.samsung.com/africa_fr/support	8000 0077	COTE D'IVOIRE
	800-00-0077	SENEGAL
	7095-0077	CAMEROON
www.samsung.com/support	0800 545 545	KENYA
	0800 300 300	UGANDA
	0800 755 755 / 0685 889 900	TANZANIA
	9999	RWANDA
	200	BURUNDI
	499999	DRC
	1969	SUDAN

Web Site	Contact Centre	Area
Middle East ■		
www.samsung.com/eg/support	08000-7267864 16580	EGYPT
www.samsung.com/n_africa/support	021 36 11 00	ALGERIA
www.samsung.com/iran/support	021-8255	IRAN
www.samsung.com/sa/support www.samsung.com/sa_en/support (English)	8002474357	SAUDI ARABIA
www.samsung.com/pk/support	0800-Samsung (72678)	PAKISTAN
www.samsung.com/n_africa/support	80-1000-12	TUNISIA
www.samsung.com/ae/support (English)	800-SAMSUNG (800 - 726 7864)	U.A.E
	800-SAMSUNG (800 - 726 7864)	OMAN
	183-CALL (183-2255)	KUWAIT
www.samsung.com/ae_ar/support (Arabic)	8000-GSAM (8000-4726)	BAHRAIN
www.samsung.com/tr/support	800-CALL (800-2255)	QATAR
	444 77 11	TURKEY
www.samsung.com/Levant/support (English)	0800-22273	JORDAN
	06 5777444	
www.samsung.com/n_africa/support	18252273	SYRIA
	080 100 22 55	MOROCCO